

Standard Equipment , (L0L)

From September 2014


**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Steering Column Electronics Control Module

- J527 Steering Column Electronics Control Module
- J623 Engine/Motor Control Module
- ST1 Fuse Panel 1
- ST2 Fuse Panel 2
- SC6 Fuse 6 (On Fuse Panel C)
- SB13 Fuse 13 (On Fuse Panel B)
- T14u 14-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T16e 16-Pin Connector
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T17f 17-Pin Connector, In the Left A-Pillar Connector Station
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Refer to Applicable Engine Wiring Diagram
- *3 For Vehicles with Heated Steering Wheel
- *4 From May 2016

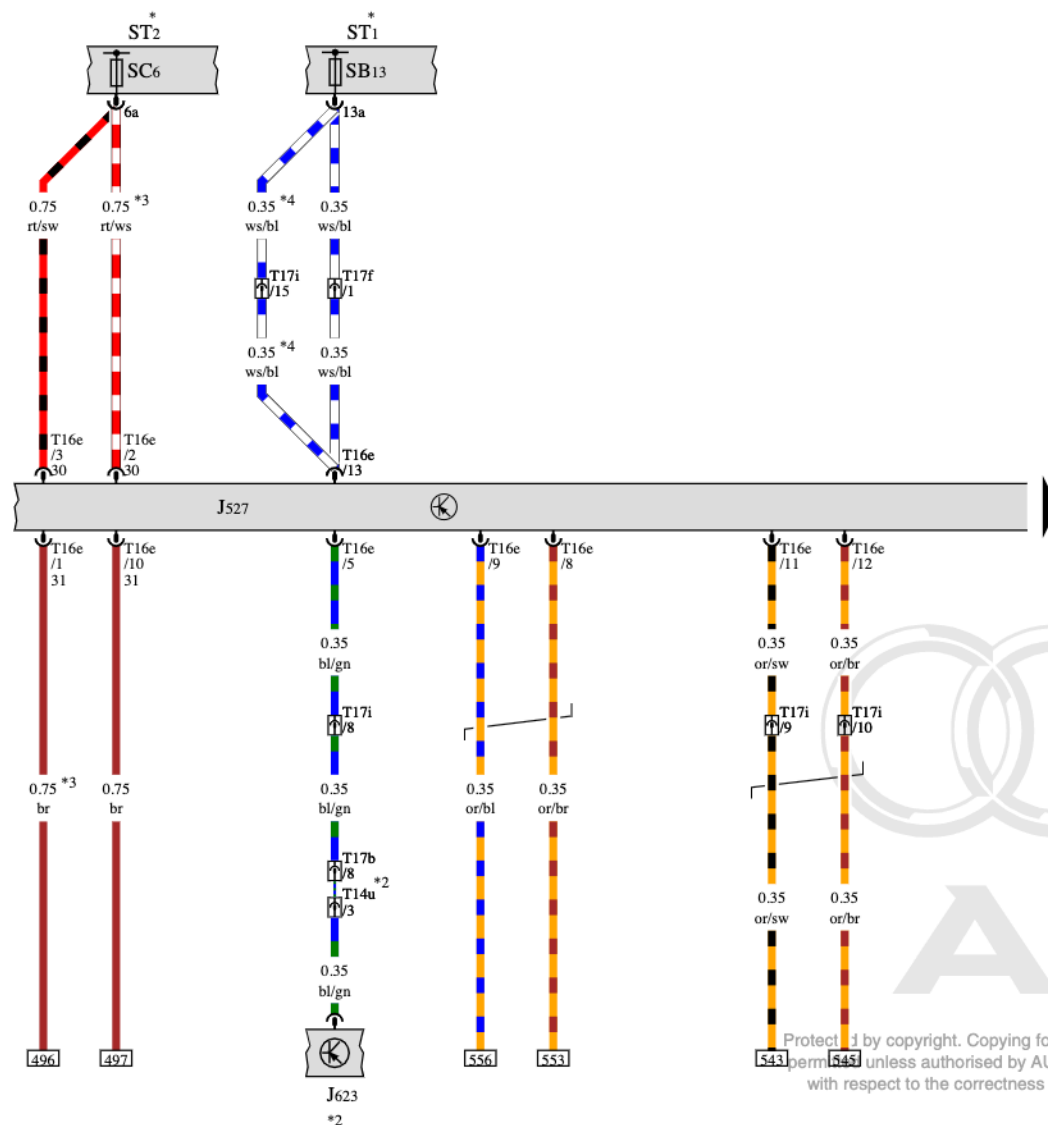


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Steering Column Electronics Control Module

- E2 Turn Signal Switch
- E5 Headlamp Flasher Switch
- E22 Windshield Wiper Intermittent Mode Switch
- E45 Cruise Control Switch
- F350 Spiral Spring
- G85 Steering Angle Sensor
- H Signal Horn Activation
- J527 Steering Column Electronics Control Module
- T6am 6-Pin Connector
- T13b 13-Pin Connector

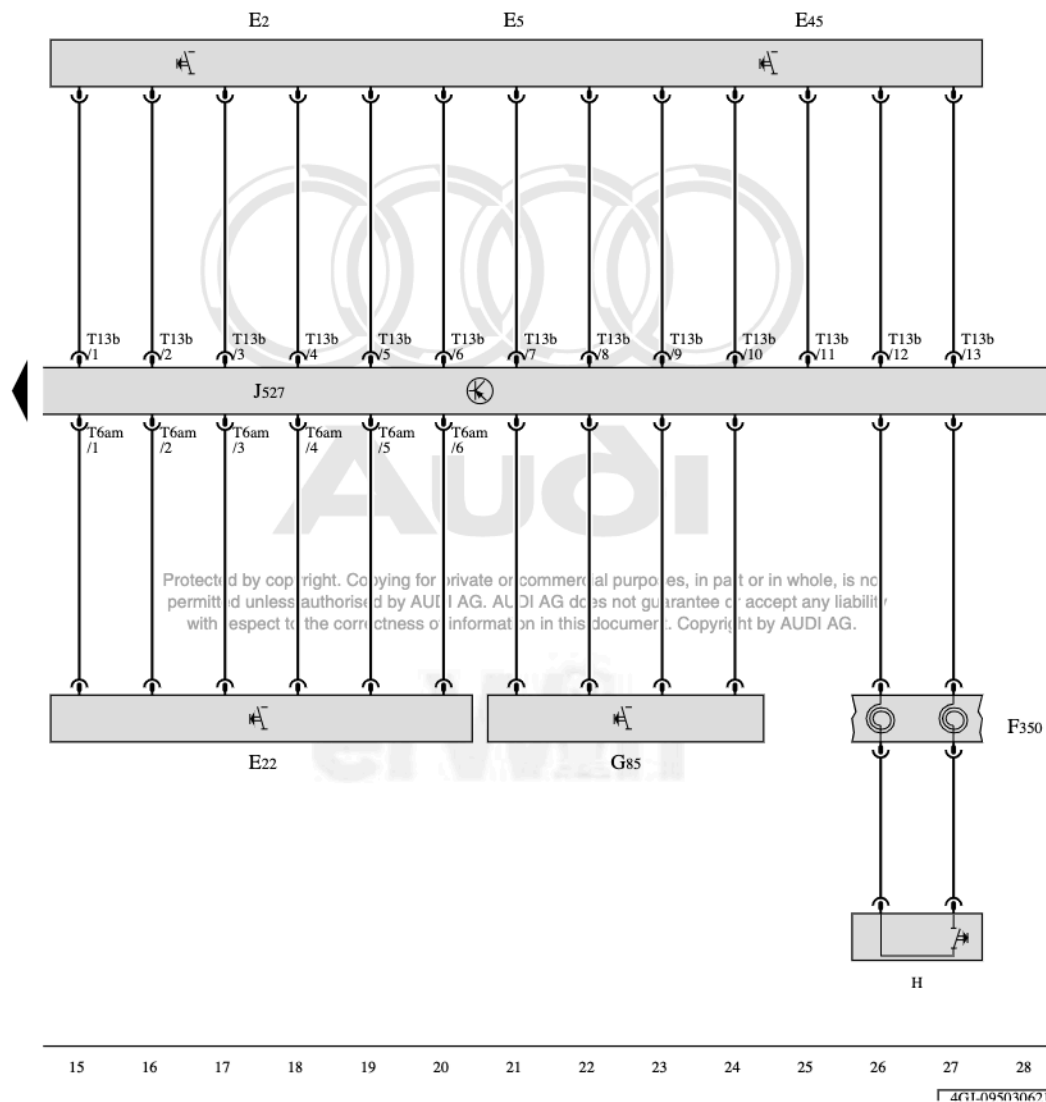

Steering Column Adjustment Switch, Vehicle Electrical System Control Module, Power Adjustable Steering Column Control Module

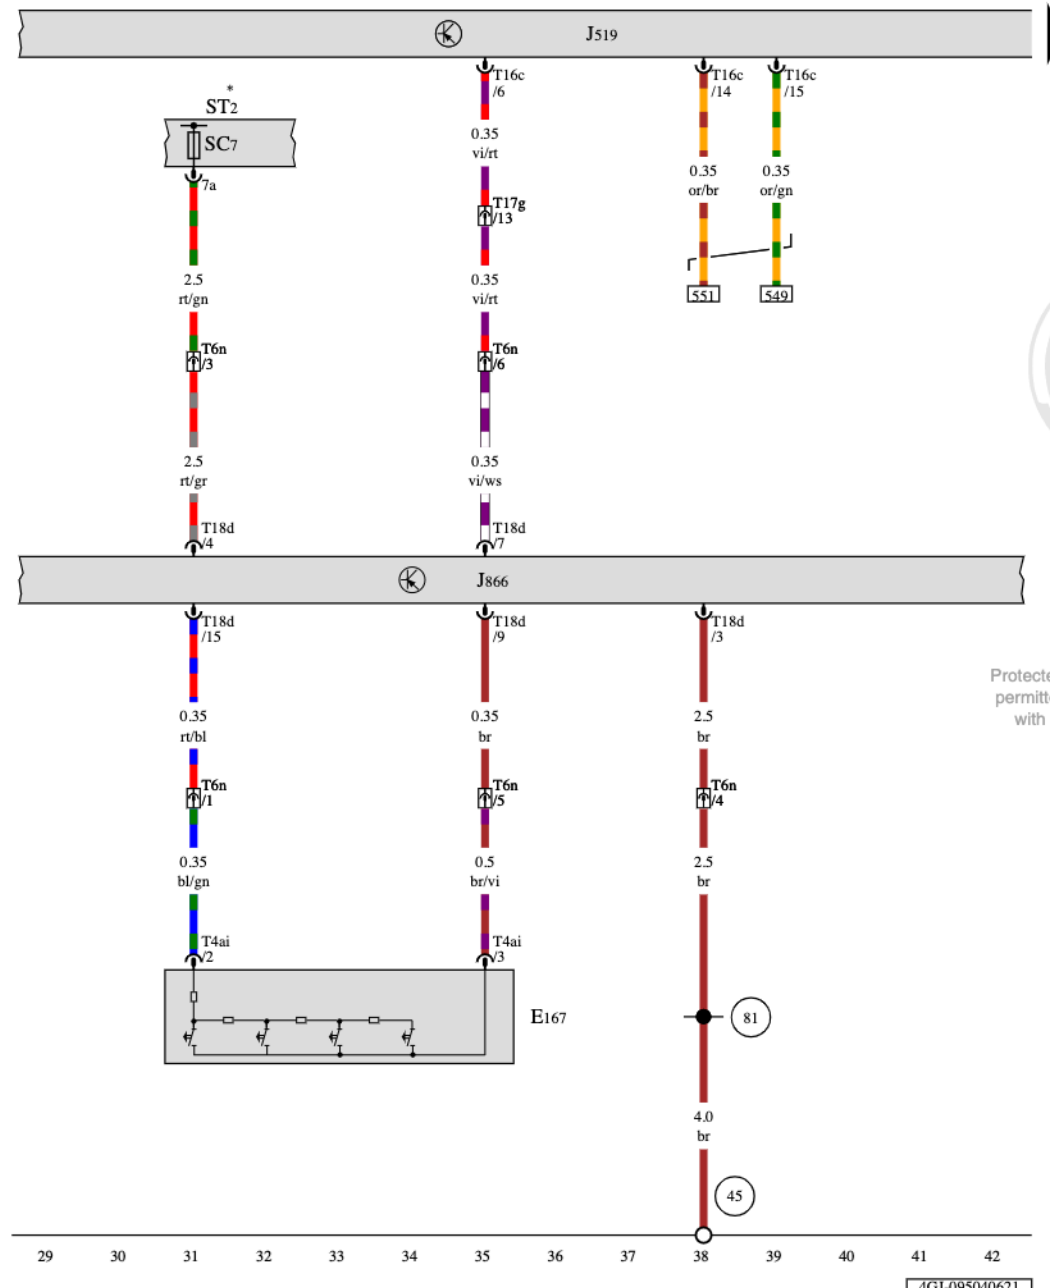

- E167 Steering Column Adjustment Switch
- J519 Vehicle Electrical System Control Module
- J866 Power Adjustable Steering Column Control Module
- ST2 Fuse Panel 2
- SC7 Fuse 7 (On Fuse Panel C)
- T4ai 4-Pin Connector
- T6n 6-Pin Connector, Behind the Steering Column Trim Panel
- T16c 16-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station, Blue
- T18d 18-Pin Connector

- 45 Ground Connection Behind Instrument Panel, Center
- 81 Ground Connection 1 (in Instrument Panel Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Vehicle Electrical System Control Module


- J519 Vehicle Electrical System Control Module
- ST2 Fuse Panel 2
- ST3 Fuse Panel 3
- SB9 Fuse 9 (On Fuse Panel B)
- SB10 Fuse 10 (On Fuse Panel B)
- SB11 Fuse 11 (On Fuse Panel B)
- SB14 Fuse 14 (On Fuse Panel B)
- T17c 17-Pin Connector
- T17d 17-Pin Connector
- T17e 17-Pin Connector

44 Ground Connection on A-Pillar, Lower Left

369 Ground Connection 4 (in Main Wiring Harness)

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Depending on Equipment

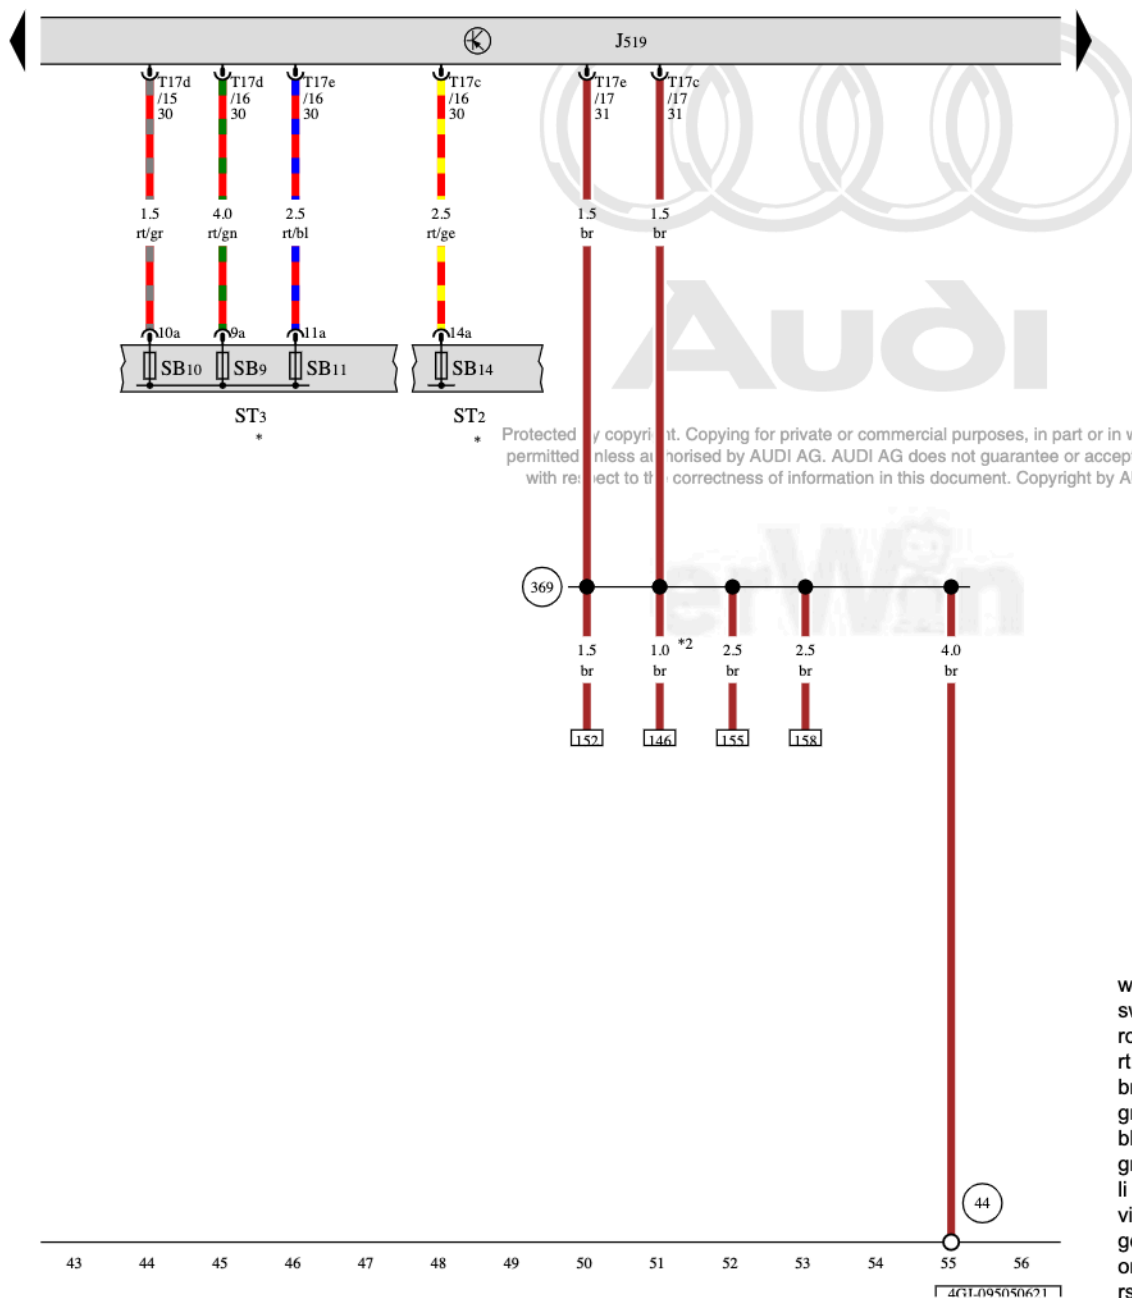

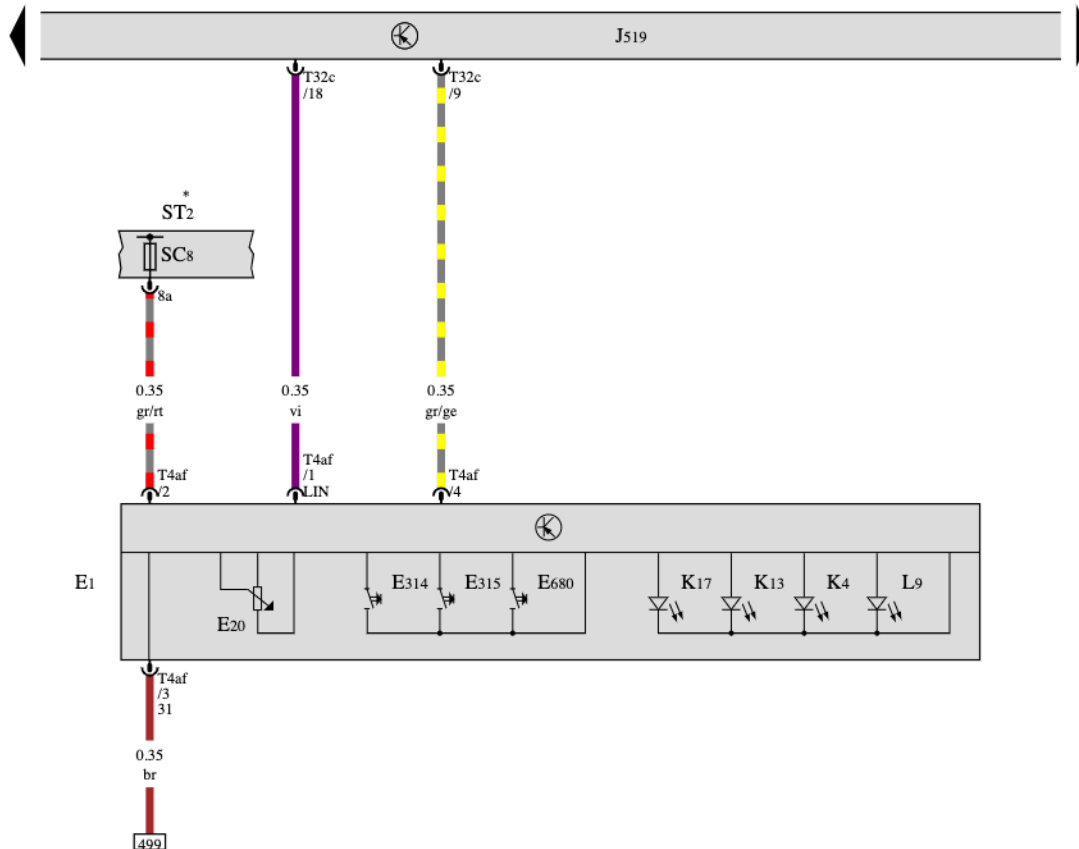

Light Switch, Instrument Panel and Switch Illumination Dimmer Switch, Rear Fog Lamp Button, Fog Lamp Button, Night Vision System Button, Vehicle Electrical System Control Module

- E1 Light Switch
- E20 Instrument Panel and Switch Illumination Dimmer Switch
- E314 Rear Fog Lamp Button
- E315 Fog Lamp Button
- E680 Night Vision System Button
- J519 Vehicle Electrical System Control Module
- K4 Position Lamp Indicator Lamp
- K13 Rear Fog Lamp Indicator Lamp
- K17 Fog Lamp Indicator Lamp
- L9 Headlamp Switch Illumination Bulb
- ST2 Fuse Panel 2
- SC8 Fuse 8 (On Fuse Panel C)
- T4af 4-Pin Connector
- T32c 32-Pin Connector
- * Refer to Applicable Wiring Diagram for Fuse Positions

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Emergency Flasher Button, Front Center Console Control Head, Vehicle Electrical System Control Module


- E149 Rear Window Shade Switch
- E229 Emergency Flasher Button
- E266 Parking Aid Button
- E461 Front Center Console Control Head
- E581 Parallel Parking Assistance Button
- J519 Vehicle Electrical System Control Module
- J791 Parallel Parking Assistance Control Module
- K6 Emergency Flasher Indicator Lamp
- K136 Parking Aid Indicator Lamp
- K241 Parallel Parking Assistance Indicator Lamp
- L156 Switch Illumination Bulb
- T5u 5-Pin Connector
- T6ai 6-Pin Connector
- T10k 10-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station, Blue
- T17q 17-Pin Connector, In the Coupling Point in the Right Interior
- T32c 32-Pin Connector

A175 Connection 58s (in Instrument Panel Wiring Harness)

- * For Vehicles with Parallel Parking Assistance
- *2 For Vehicles with Park Distance Control (PDC)

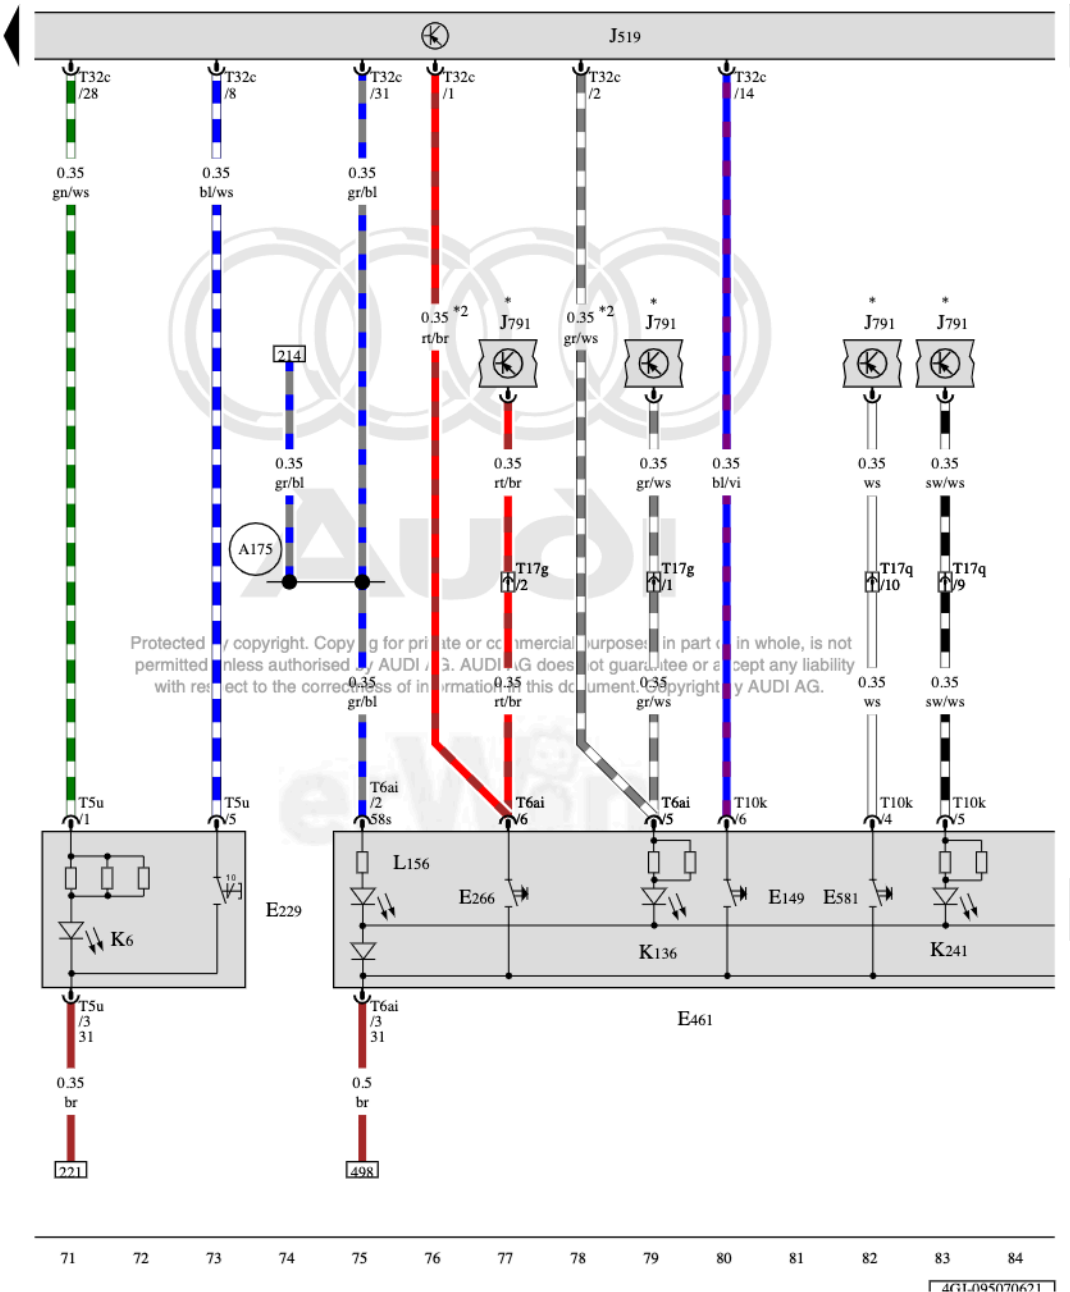


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

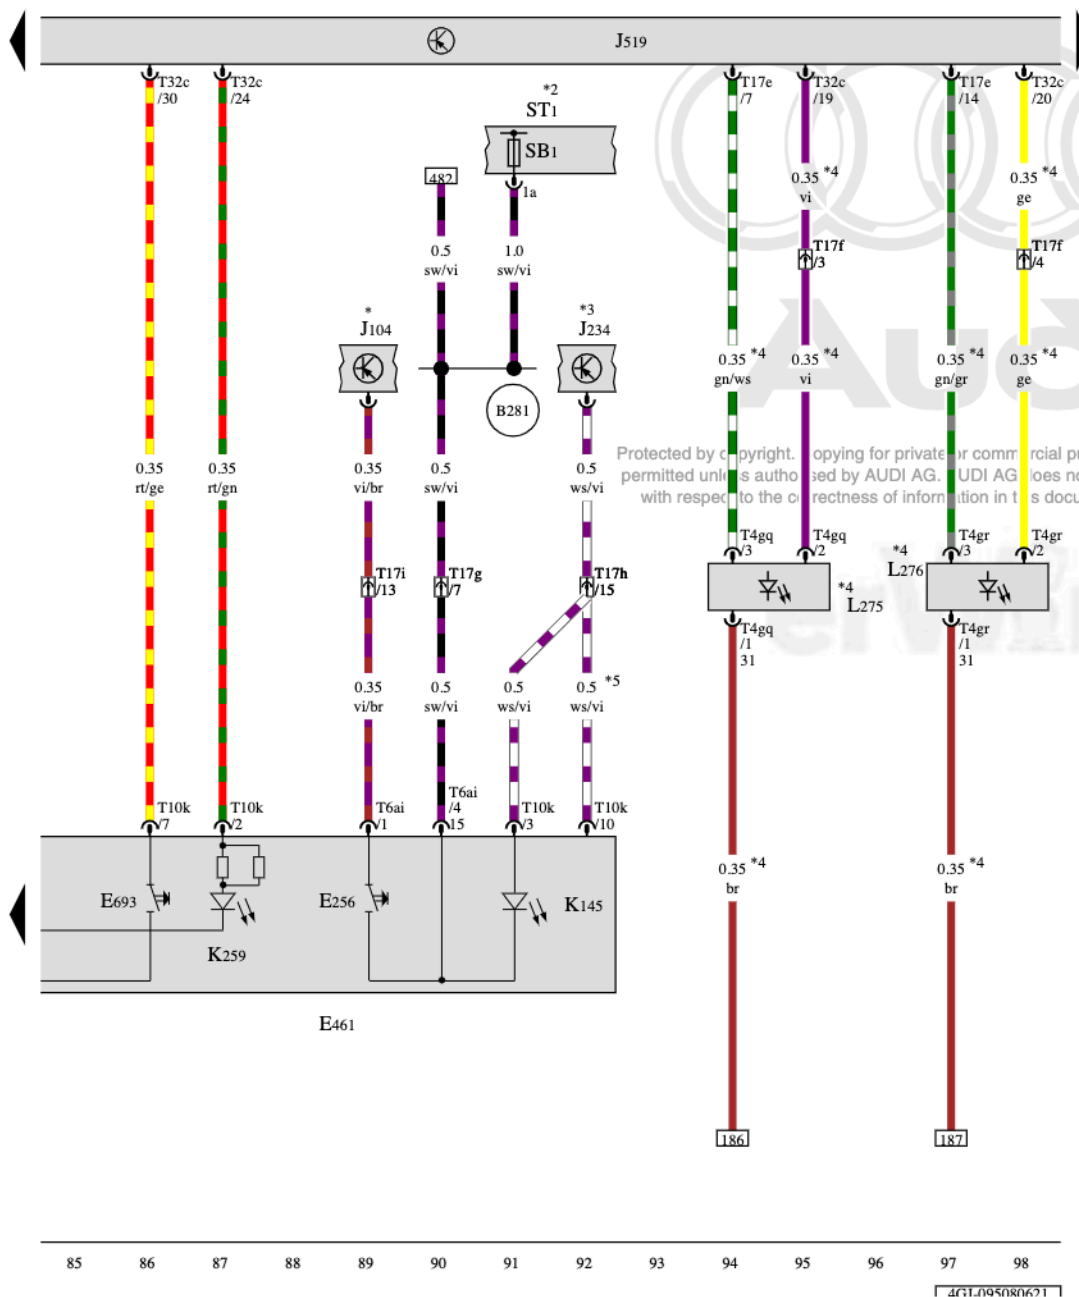

Front Center Console Control Head, Vehicle Electrical System Control Module, Left Signature Lighting Bulb, Right Signature Lighting Bulb

- E256 ASR/ESP Button
- E461 Front Center Console Control Head
- E693 Start/Stop Mode Button
- J104 ABS Control Module
- J234 Airbag Control Module
- J519 Vehicle Electrical System Control Module
- K145 Front Passenger Airbag -Disabled- Indicator Lamp
- K259 Start/Stop Mode Indicator Lamp
- L275 Left Signature Lighting Bulb
- L276 Right Signature Lighting Bulb
- ST1 Fuse Panel 1
- SB1 Fuse 1 (On Fuse Panel B)
- T4gq 4-Pin Connector, Gray
- T4gr 4-Pin Connector, Gray
- T6ai 6-Pin Connector
- T10k 10-Pin Connector
- T17e 17-Pin Connector
- T17f 17-Pin Connector, In the Left A-Pillar Connector Station, White
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station, Blue
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station
- T32c 32-Pin Connector
- B281 Positive Connection 5 (15a) (in Main Wiring Harness)
- * Refer to Applicable Wiring Diagram for ABS
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 Refer to Applicable Airbag Wiring Diagram
- *4 For Vehicles with Hybrid Drive
- *5 For Vehicles with Key Switch for Deactivating Front Passenger Airbag/Thorax Airbag/Seat Belt Latch Monitoring

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

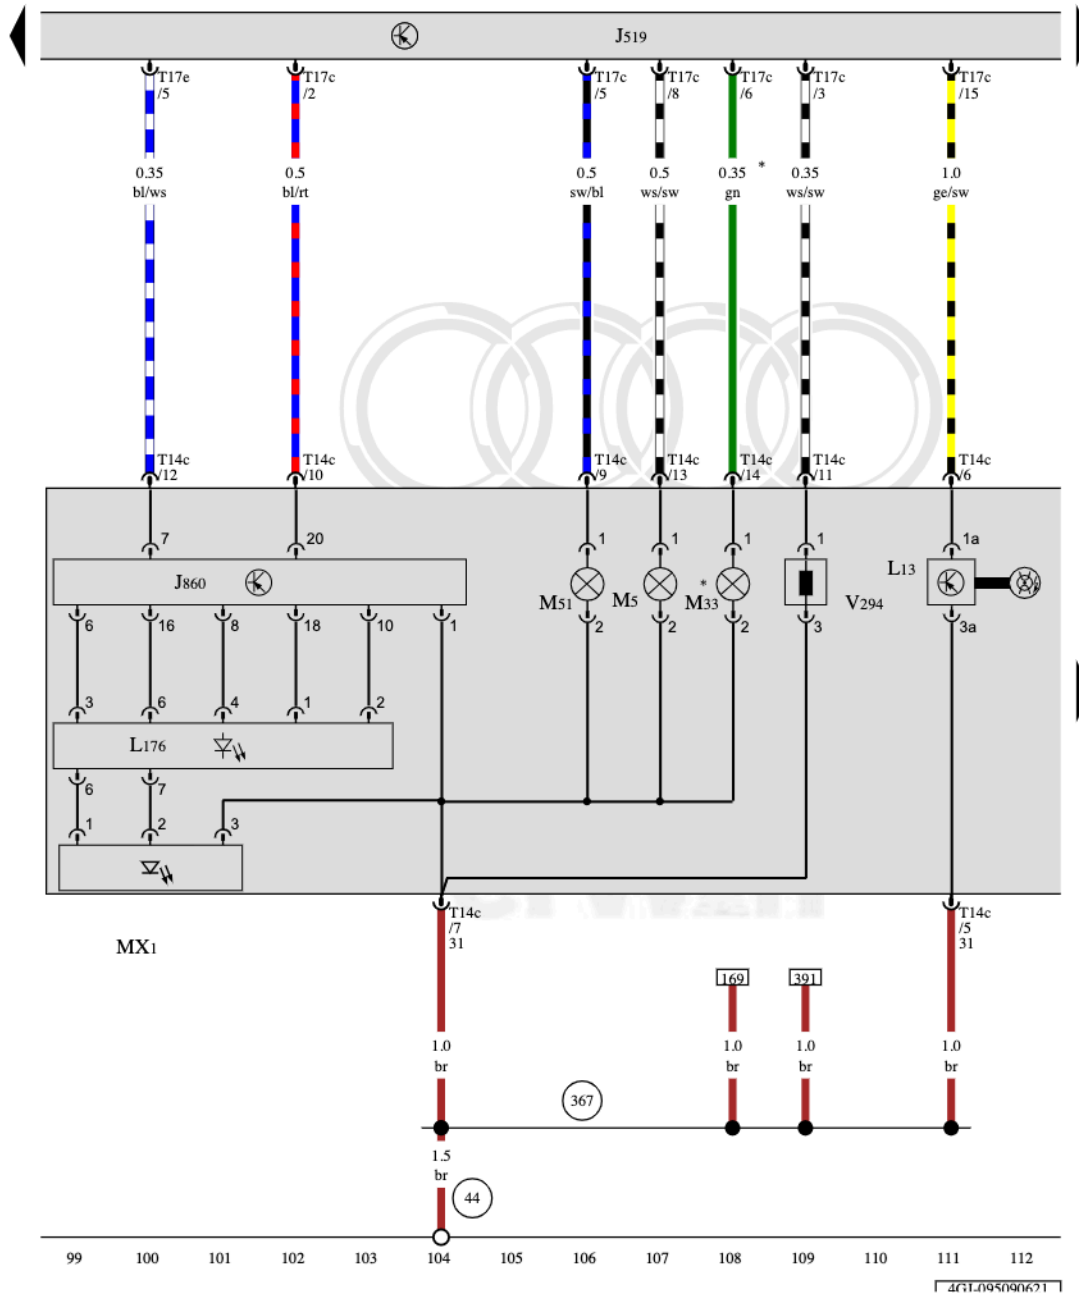

Vehicle Electrical System Control Module, Left Daytime Running Lamp and Position Lamp Control Module, Left HID Headlamp Bulb, Left Front Turn Signal Bulb, Left Front Side Marker Lamp Bulb

- J519 Vehicle Electrical System Control Module
- J860 Left Daytime Running Lamp and Position Lamp Control Module
- L13 Left HID Headlamp Bulb
- L176 Left Daytime Running Lamp and Position Lamp LED Module
- MX1 Left Front Headlamp
- M5 Left Front Turn Signal Bulb
- M33 Left Front Side Marker Lamp Bulb
- M51 Left Stationary Cornering Lamp
- T14c 14-Pin Connector
- T17c 17-Pin Connector
- T17e 17-Pin Connector
- V294 Left Low Beam Headlamp Reflector Motor


44 Ground Connection on A-Pillar, Lower Left

367 Ground Connection 2 (in Main Wiring Harness)

* For USA Only

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

G76	Left Rear Level Control System Sensor
J519	Vehicle Electrical System Control Module
MX1	Left Front Headlamp
MX2	Right Front Headlamp
T4at	4-Pin Connector
T14c	14-Pin Connector
T14d	14-Pin Connector
T17c	17-Pin Connector
T17d	17-Pin Connector
T17e	17-Pin Connector
V48	Left Headlamp Range Control Adjustment Motor
V49	Right Headlamp Range Control Adjustment Motor

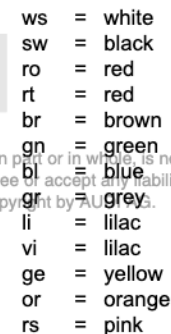

Vehicle Electrical System Control Module, Right Daytime Running Lamp and Position Lamp Control Module, Right Front Headlamp, Right Front Turn Signal Bulb, Right Stationary Cornering Lamp


- J519 Vehicle Electrical System Control Module
- J861 Right Daytime Running Lamp and Position Lamp Control Module
- L14 Right HID Headlamp Bulb
- L175 Right Daytime Running Lamp Bulb
- MX2 Right Front Headlamp
- M7 Right Front Turn Signal Bulb
- M34 Right Front Side Marker Lamp Bulb
- M52 Right Stationary Cornering Lamp
- T14d 14-Pin Connector
- T17c 17-Pin Connector
- T17e 17-Pin Connector
- V295 Right Low Beam Headlamp Reflector Motor

43 Ground Connection on A-Pillar, Lower Right


379 Ground Connection 14 (in Main Wiring Harness)

* For USA Only

*2 Depending on Equipment

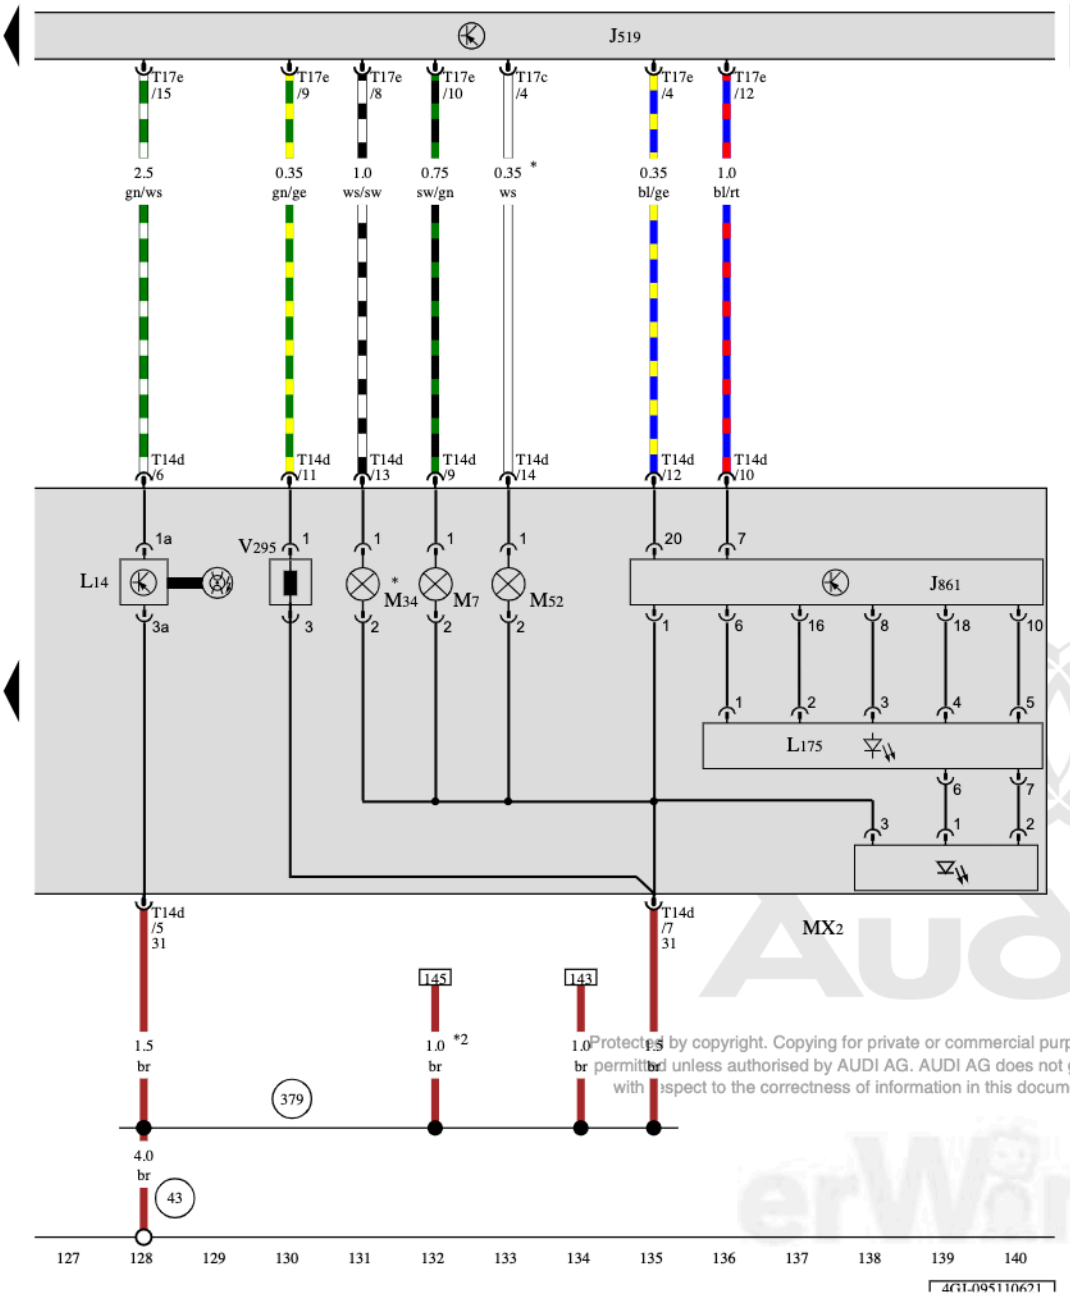

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

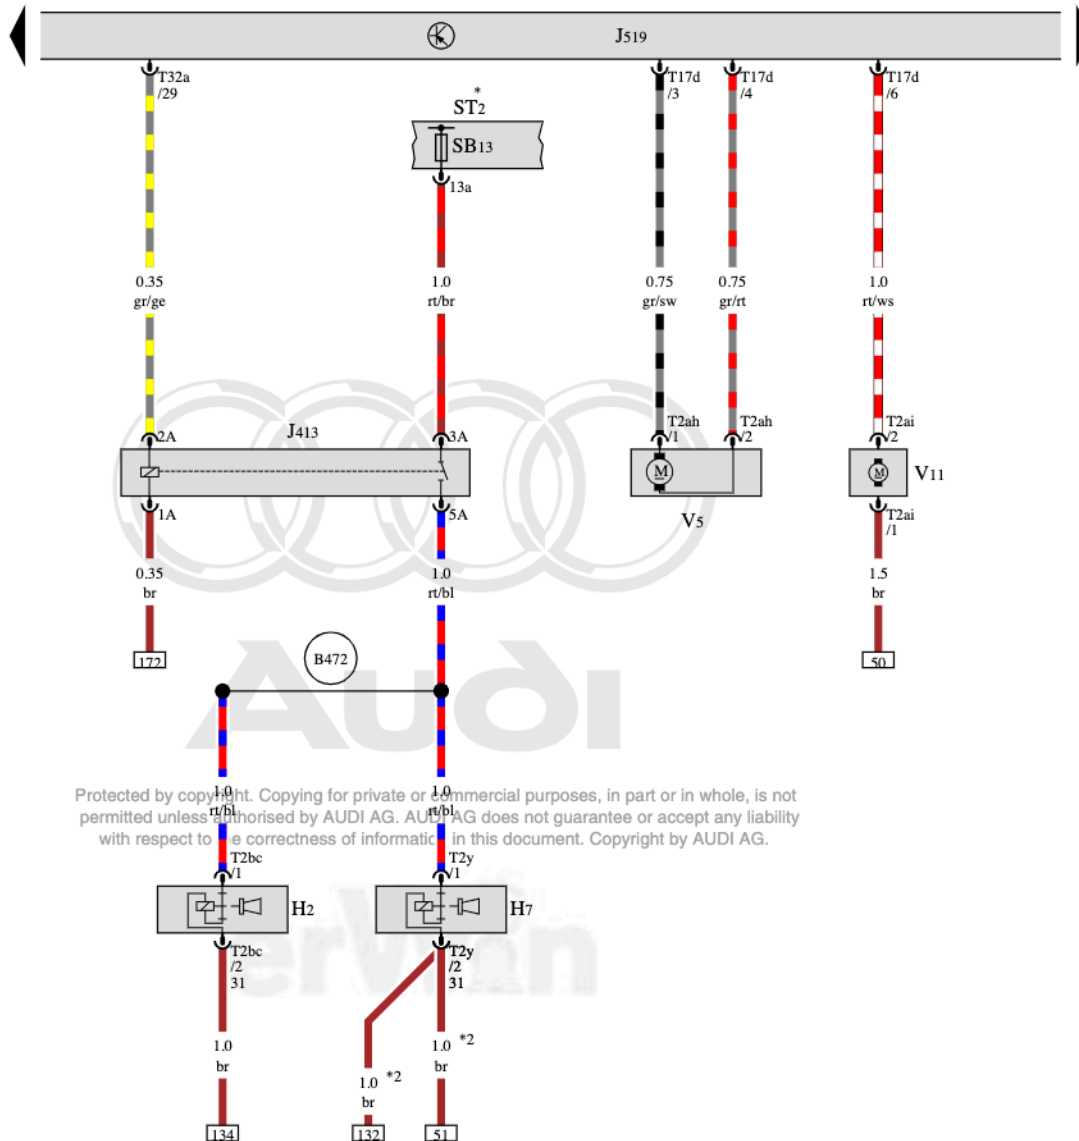

High Tone Horn, Low Tone Horn, Horn Relay, Vehicle Electrical System Control Module, Windshield Washer Pump, Headlamp Washer System Pump

- H2 High Tone Horn
- H7 Low Tone Horn
- J413 Horn Relay
- J519 Vehicle Electrical System Control Module
- ST2 Fuse Panel 2
- SB13 Fuse 13 (On Fuse Panel B)
- T2ah 2-Pin Connector
- T2ai 2-Pin Connector
- T2bc 2-Pin Connector
- T2y 2-Pin Connector
- T17d 17-Pin Connector
- T32a 32-Pin Connector
- V5 Windshield Washer Pump
- V11 Headlamp Washer System Pump

(B472) Connection 8 (in Main Wiring Harness)

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Depending on Equipment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Rain/Light Recognition Sensor, Wiper Motor Control Module, Vehicle Electrical System Control Module

- G397 Rain/Light Recognition Sensor
- J400 Wiper Motor Control Module
- J519 Vehicle Electrical System Control Module
- ST2 Fuse Panel 2
- ST3 Fuse Panel 3
- SB8 Fuse 8 (On Fuse Panel B)
- SB9 Fuse 9 (On Fuse Panel B)
- T3o 3-Pin Connector
- T4t 4-Pin Connector
- T4u 4-Pin Connector, Near the Interior Rearview Mirror
- T16c 16-Pin Connector
- V Windshield Wiper Motor
- B698 LIN Bus Connection 3 (in Main Wiring Harness)
- Z5 Connection (in Window Defogger Wiring Harness)
- * For RHD Vehicles
- *2 Depending on Equipment
- *3 Refer to Applicable Wiring Diagram for Fuse Positions

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

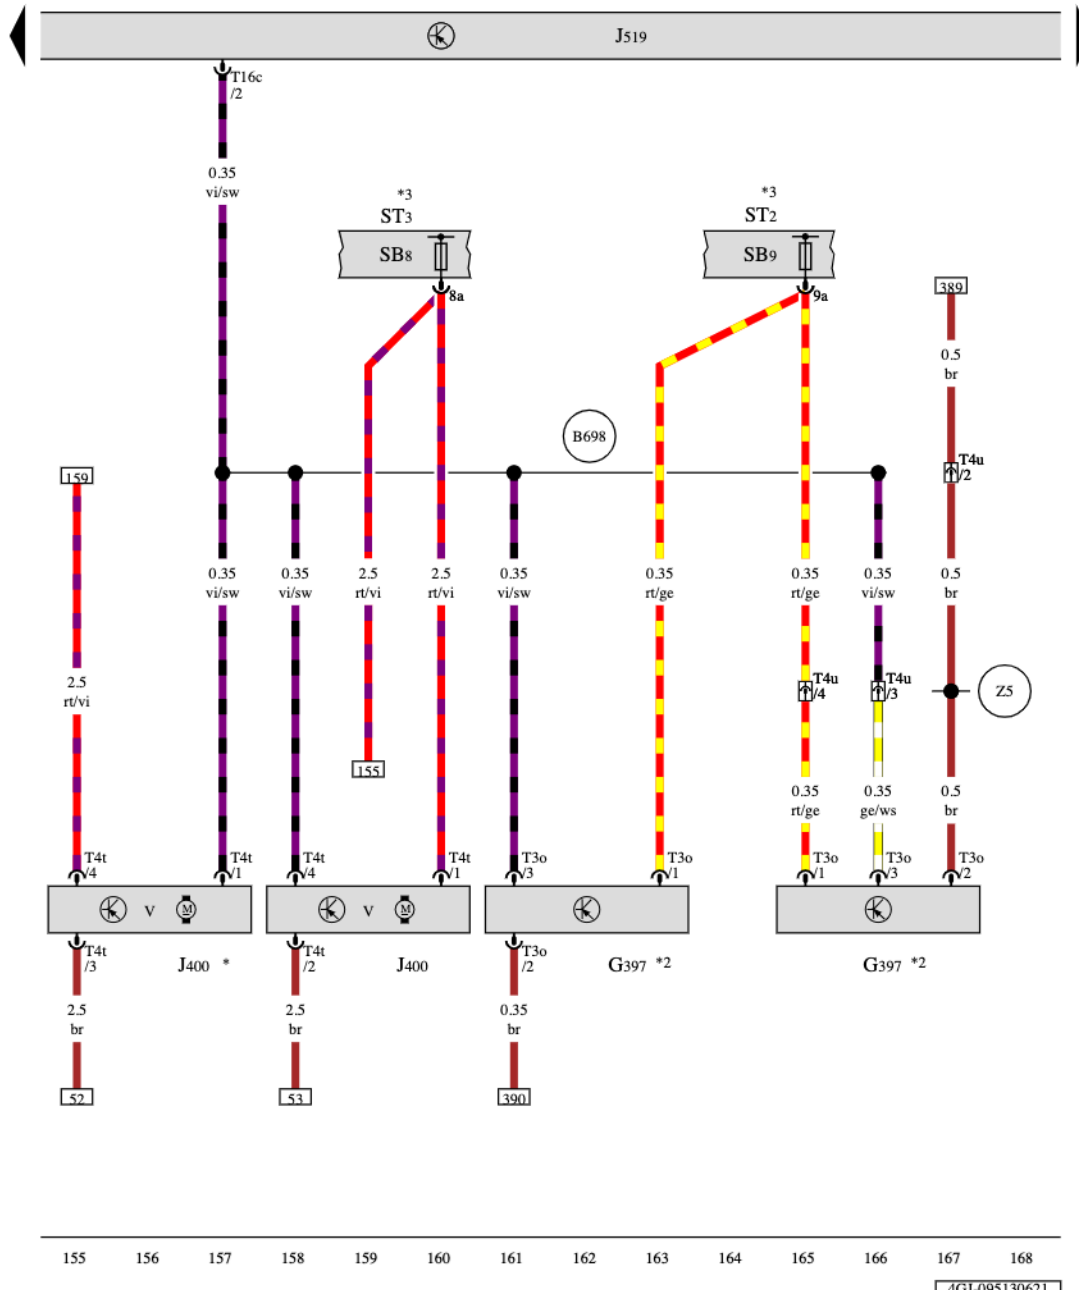

Vehicle Electrical System Control Module, Left Washer Nozzle Heater



- J519 Vehicle Electrical System Control Module
- T2w 2-Pin Connector
- T2x 2-Pin Connector
- T32a 32-Pin Connector
- Z20 Left Washer Nozzle Heater
- Z21 Right Washer Nozzle Heater


368 Ground Connection 3 (in Main Wiring Harness)

B567 Connection 34 (in Main Wiring Harness)

* For Vehicles with Start/Stop System

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

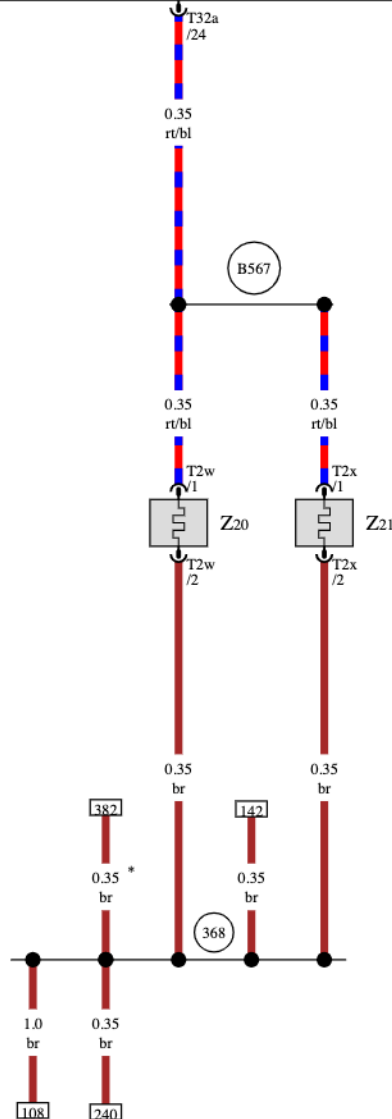

169 170 171 172 173 174 175 176 177 178 179 180 181 182


461.0951.00671

Engine Hood Contact Switch, Vehicle Electrical System Control Module


- F266 Engine Hood Contact Switch
- F329 Hood Contact Switch 2
- J519 Vehicle Electrical System Control Module
- T2af 2-Pin Connector
- T2ay 2-Pin Connector
- T32a 32-Pin Connector

- 43 Ground Connection on A-Pillar, Lower Right
- 44 Ground Connection on A-Pillar, Lower Left
- 366 Ground Connection 1 (in Main Wiring Harness)
- 380 Ground Connection 15 (in Main Wiring Harness)
- B473 Connection 9 (in Main Wiring Harness)
- * For Vehicles with Hybrid Drive

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

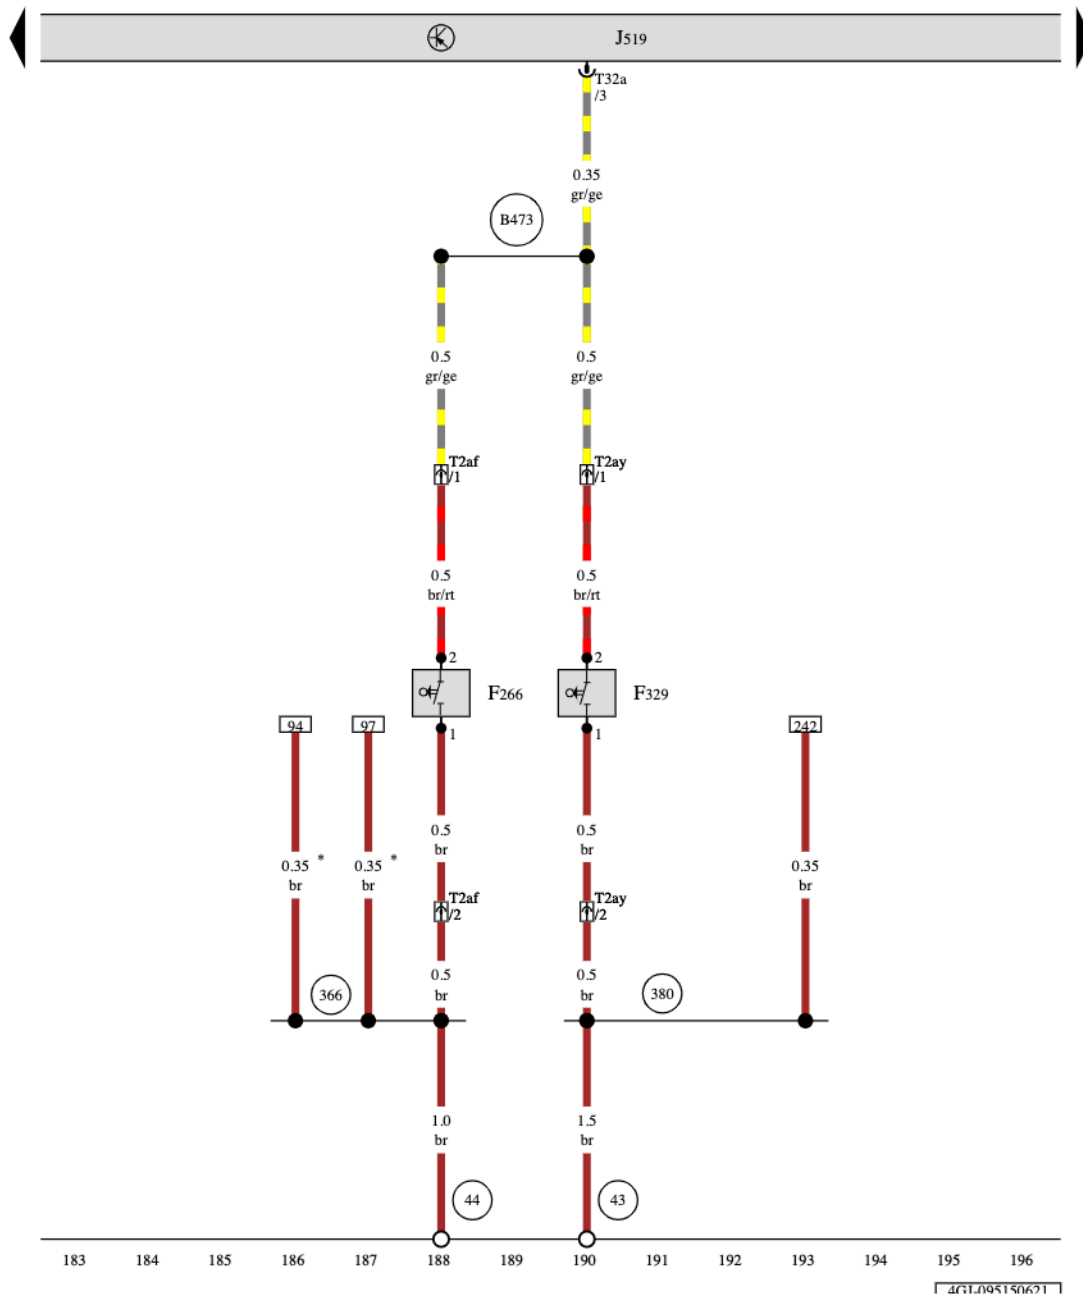

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

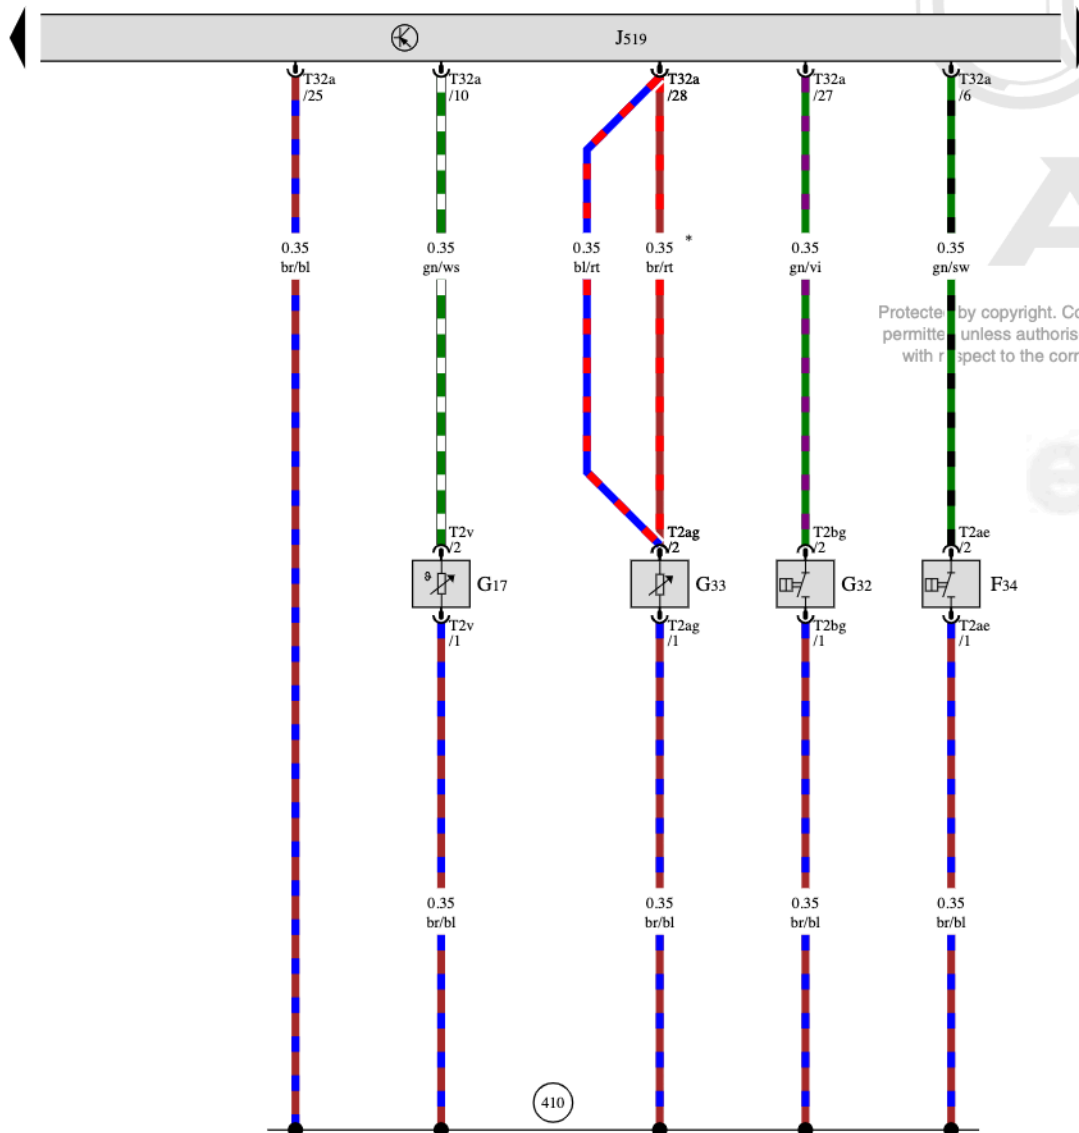


Brake Fluid Level Warning Switch, Outside Air Temperature Sensor, Engine Coolant Level Sensor, Windshield Washer Fluid Level Sensor, Vehicle Electrical System Control Module

- F34 Brake Fluid Level Warning Switch
- G17 Outside Air Temperature Sensor
- G32 Engine Coolant Level Sensor
- G33 Windshield Washer Fluid Level Sensor
- J519 Vehicle Electrical System Control Module
- T2ae 2-Pin Connector
- T2ag 2-Pin Connector
- T2bg 2-Pin Connector
- T2v 2-Pin Connector
- T32a 32-Pin Connector

410 Sensor Ground Connection 1 (in Main Wiring Harness)

* For Vehicles with a Headlamp Washer System

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

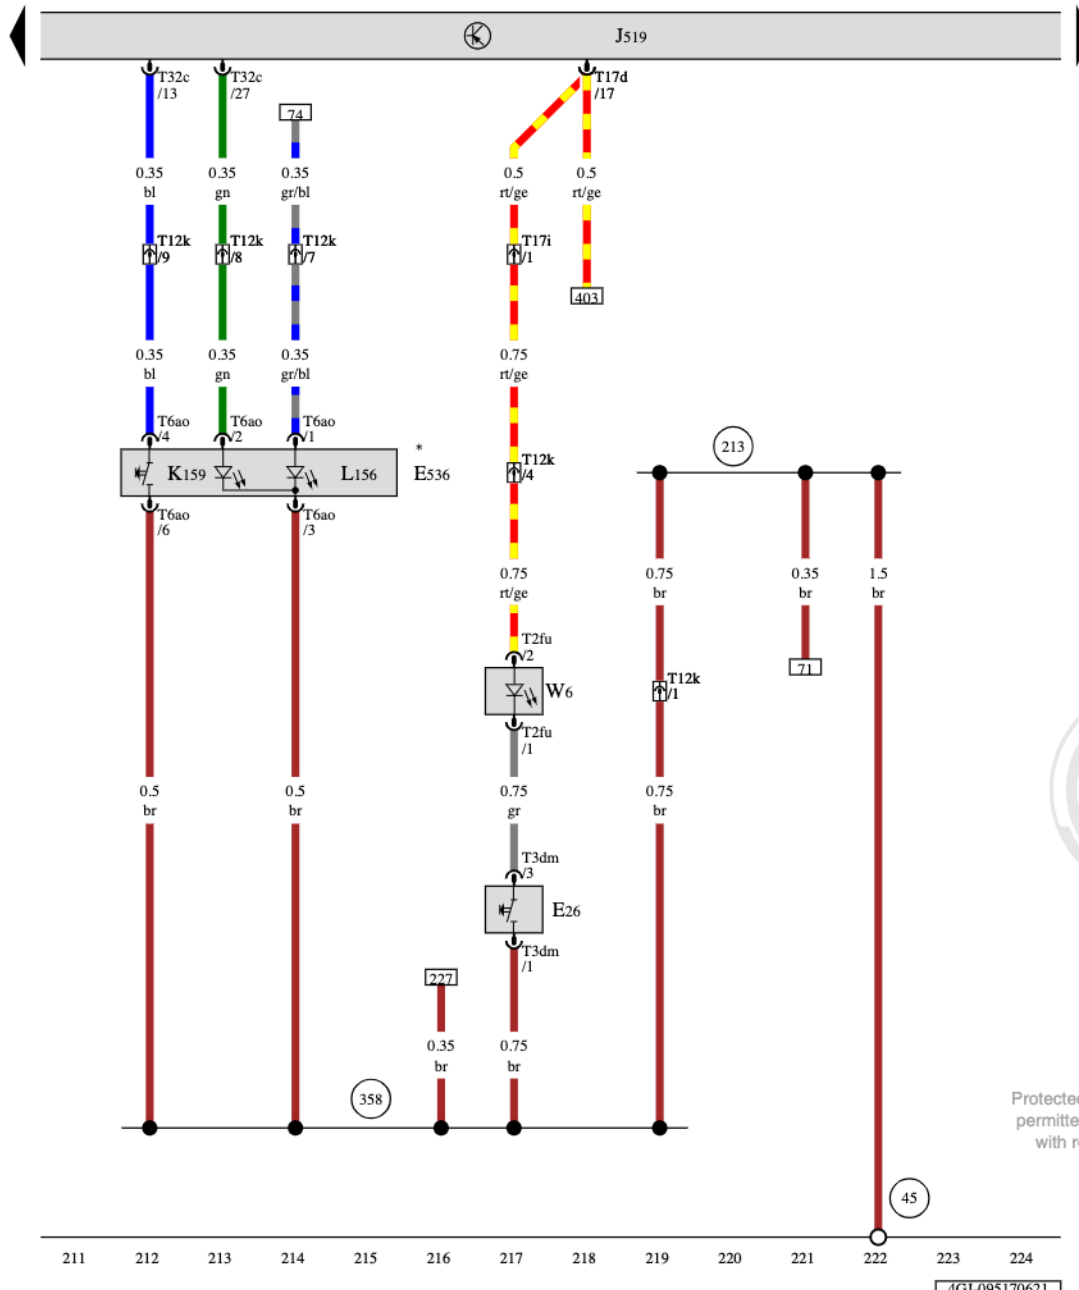

Glove Compartment Lamp Switch, Valet Parking Lock Button, Vehicle Electrical System Control Module, Glove Compartment Lamp

- E26 Glove Compartment Lamp Switch
- E536 Valet Parking Lock Button
- J519 Vehicle Electrical System Control Module
- K159 Valet Parking Indicator Lamp
- L156 Switch Illumination Bulb
- T2fu 2-Pin Connector
- T3dm 3-Pin Connector
- T6ao 6-Pin Connector
- T12k 12-Pin Connector, Behind the Glove Compartment
- T17d 17-Pin Connector
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station
- T32c 32-Pin Connector
- W6 Glove Compartment Lamp


- 45 Ground Connection Behind Instrument Panel, Center
- 213 Ground Connection (in Instrument Panel Wiring Harness)
- 358 Ground Connection (in Glove Compartment Wiring Harness)

* For USA Only

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Vehicle Electrical System Control Module, Left Front Footwell Illumination Bulb, Right Front Footwell Illumination Bulb, Center Armrest Illumination Bulb

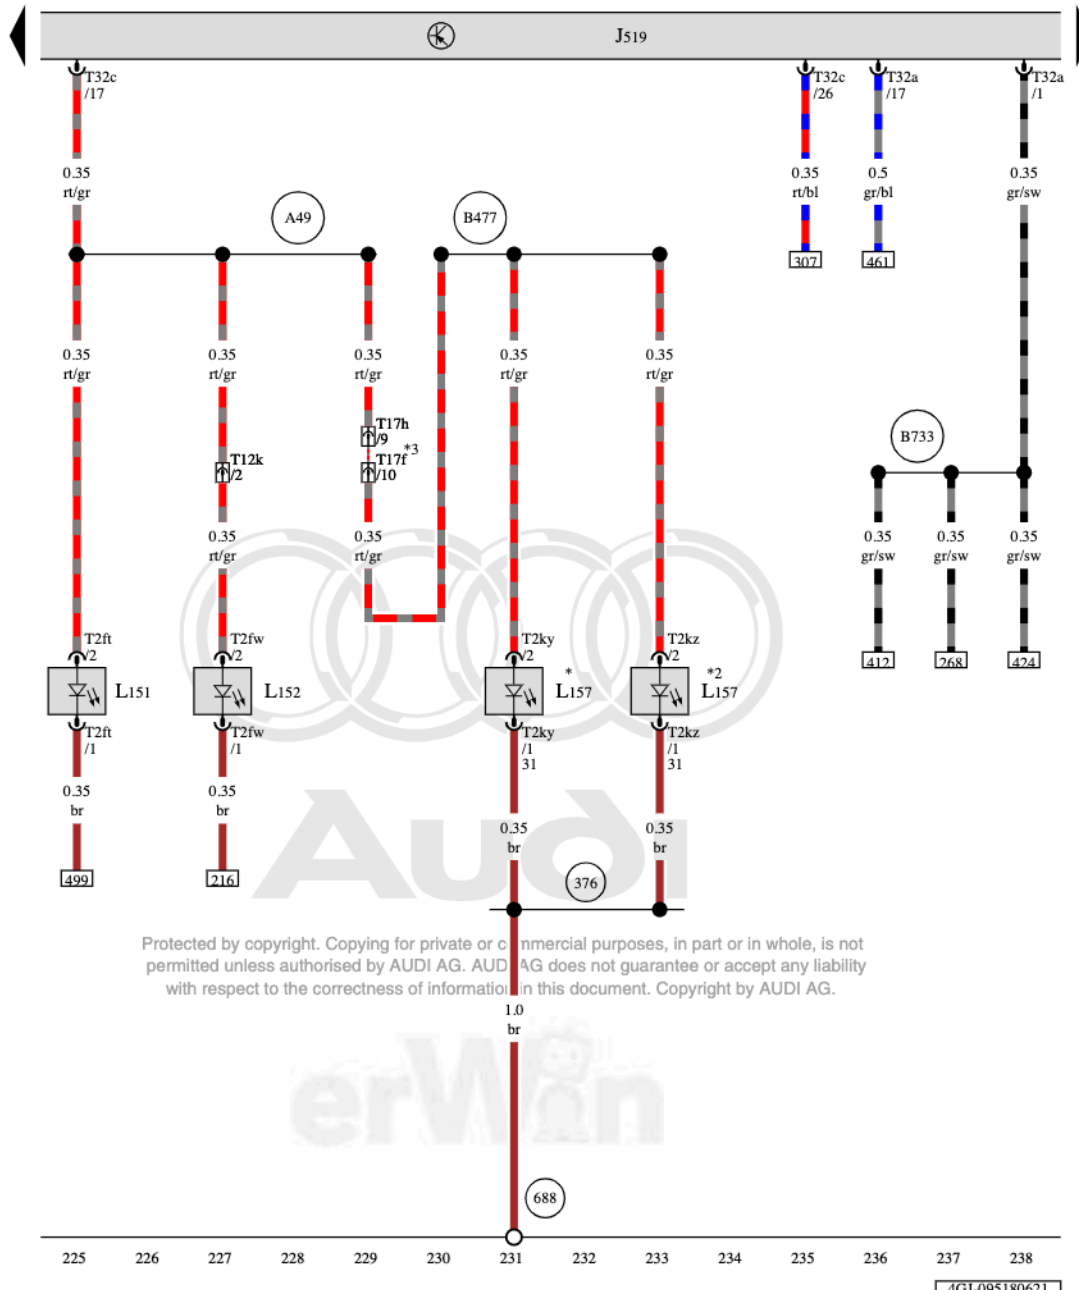


- J519 Vehicle Electrical System Control Module
- L151 Left Front Footwell Illumination Bulb
- L152 Right Front Footwell Illumination Bulb
- L157 Center Armrest Illumination Bulb
- T2ft 2-Pin Connector
- T2fw 2-Pin Connector
- T2ky 2-Pin Connector
- T2kz 2-Pin Connector
- T12k 12-Pin Connector, Behind the Glove Compartment
- T17f 17-Pin Connector, In the Left A-Pillar Connector Station
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- T32a 32-Pin Connector
- T32c 32-Pin Connector

- 376 Ground Connection 11 (in Main Wiring Harness)
- 688 Ground Connection 2 on Center Tunnel
- A49 Connection 1 (in Instrument Panel Wiring Harness)
- B477 Connection 13 (in Main Wiring Harness)
- B733 Connection 58s (in Main Wiring Harness) 3

- * Left
- *2 Right
- *3 Depending on Equipment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

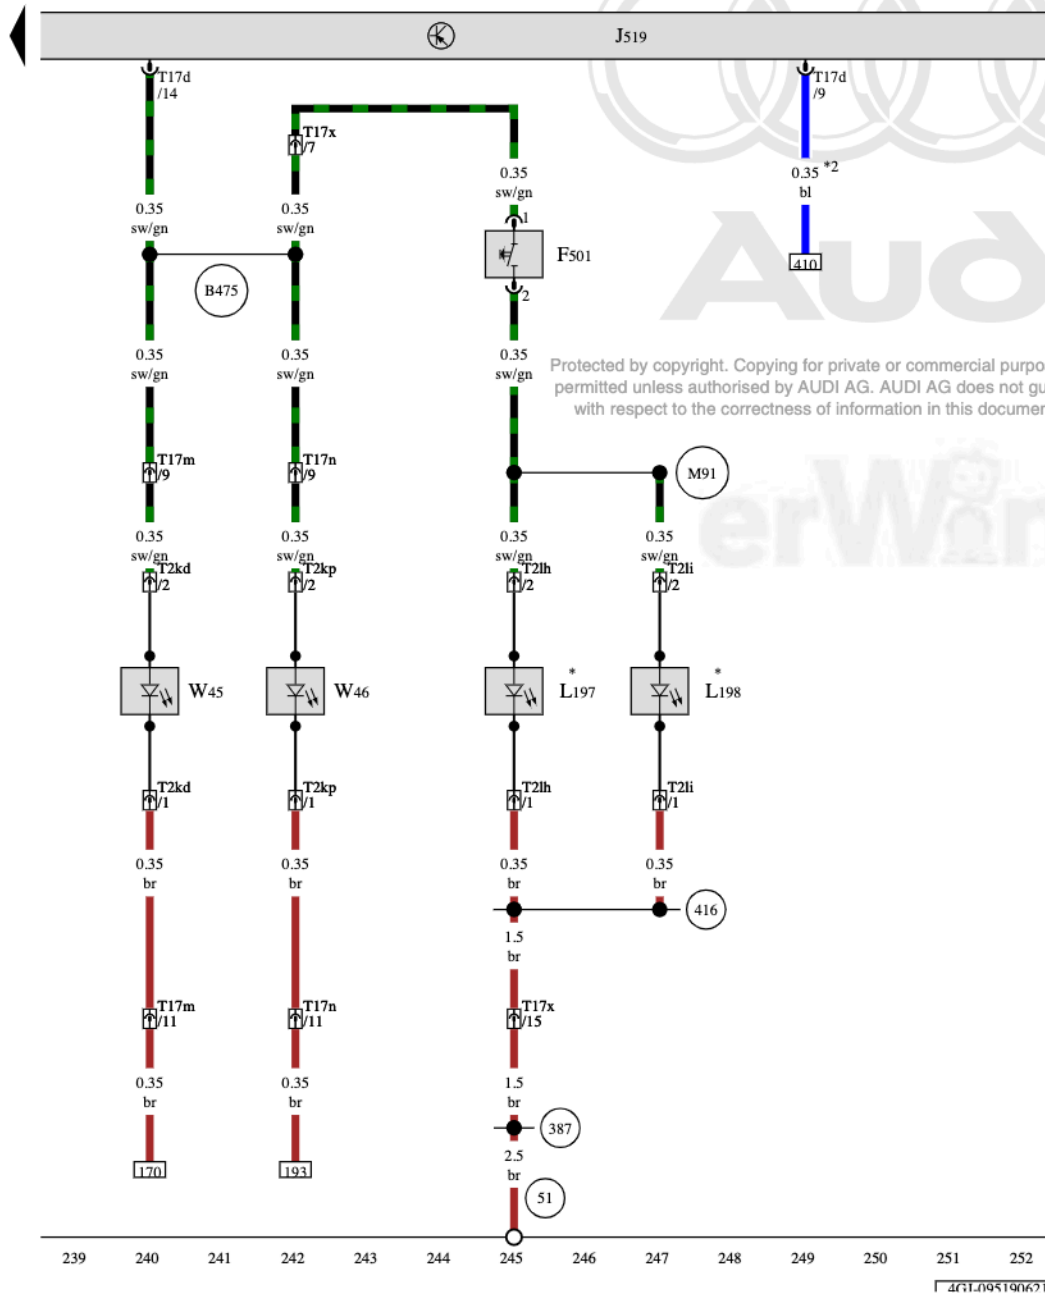

Rear Center Console Ambient Lighting Contact Switch, Vehicle Electrical System Control Module, Rear Center Console Ambient Lighting Bulb 1, Rear Center Console Ambient Lighting Bulb 2, Left Rear Footwell Lamp, Right Rear Footwell Lamp


- F501 Rear Center Console Ambient Lighting Contact Switch
- J519 Vehicle Electrical System Control Module
- L197 Rear Center Console Ambient Lighting Bulb 1
- L198 Rear Center Console Ambient Lighting Bulb 2
- T2kd 2-Pin Connector
- T2kp 2-Pin Connector
- T2lh 2-Pin Connector
- T2li 2-Pin Connector
- T17d 17-Pin Connector
- T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- T17x 17-Pin Connector, In the Coupling Point for the Rear Center Armrest
- W45 Left Rear Footwell Lamp
- W46 Right Rear Footwell Lamp

- 51 Ground Connection in Luggage Compartment, Right
- 387 Ground Connection 22 (in Main Wiring Harness)
- 416 Ground Connection (in Rear Armrest Wiring Harness)
- B475 Connection 11 (in Main Wiring Harness)
- M91 Connection 58d (in Rear Armrest Wiring Harness)

- * For Vehicles with Auxiliary Lamps
- *2 The Color of the Wires Depends on Vehicle Equipment


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Anti-Theft Immobilizer Reader Coil, Comfort System Central Control Module

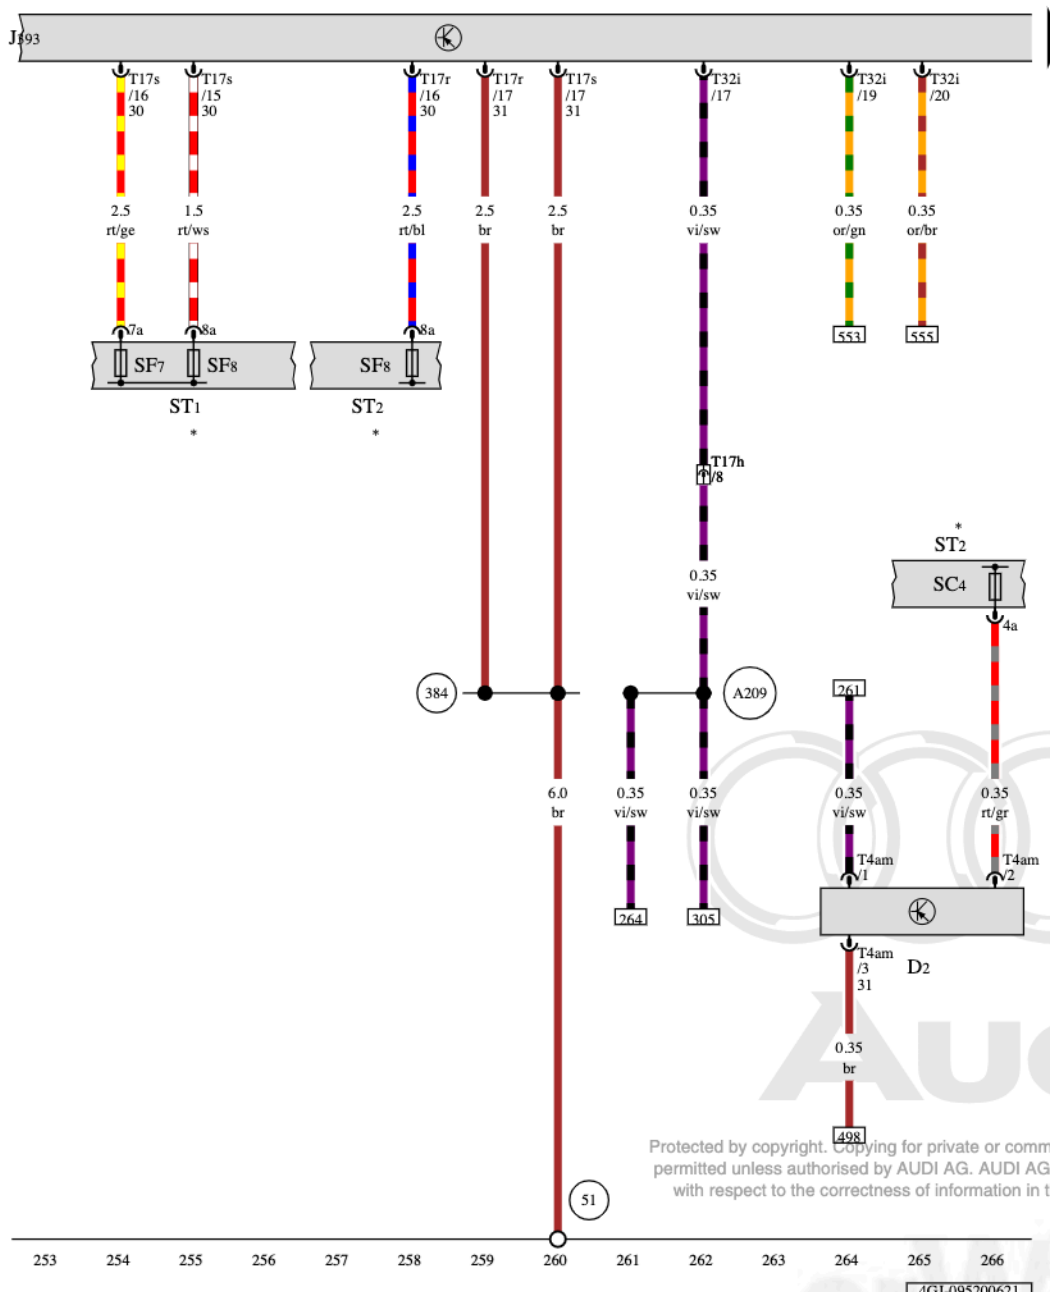

- D2 Anti-Theft Immobilizer Reader Coil
- J393 Comfort System Central Control Module
- ST1 Fuse Panel 1
- ST2 Fuse Panel 2
- SC4 Fuse 4 (On Fuse Panel C)
- SF7 Fuse 7 (On Fuse Panel F)
- SF8 Fuse 8 (On Fuse Panel F)
- T4am 4-Pin Connector
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- T17r 17-Pin Connector
- T17s 17-Pin Connector
- T32i 32-Pin Connector
- 51 Ground Connection in Luggage Compartment, Right
- 384 Ground Connection 19 (in Main Wiring Harness)
- A209 LIN Bus Connection 1 (in Instrument Panel Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions

Access/Start Authorization Button, Comfort System
Central Control Module, Central Locking and Anti-Theft
Alarm System Antenna

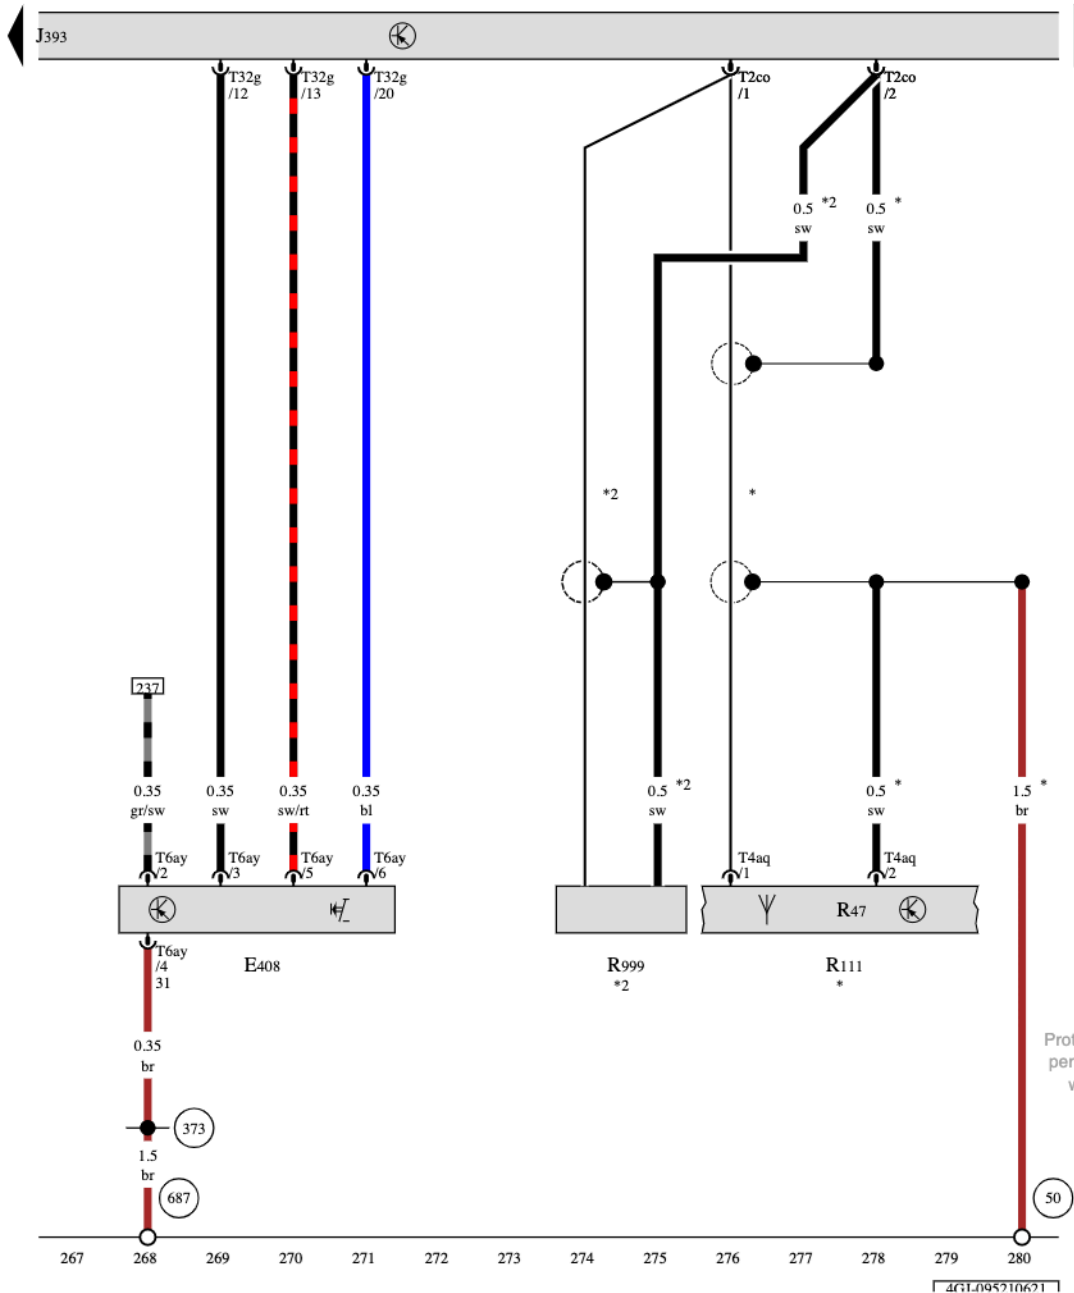


- E408 Access/Start Authorization Button
- J393 Comfort System Central Control Module
- R47 Central Locking and Anti-Theft Alarm System Antenna
- R111 Antenna Amplifier 2
- R999 Open Wire End, In the Rear Spoiler
- T2co 2-Pin Connector
- T4aq 4-Pin Connector
- T6ay 6-Pin Connector
- T32g 32-Pin Connector

- 50 Ground Connection in Luggage Compartment, Left
- 373 Ground Connection 8 (in Main Wiring Harness)
- 687 Ground Connection 1 on Center Tunnel
- * Sedan
- *2 Avant

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Comfort System Central Control Module, Access/Start System Antenna 1 in Vehicle Interior

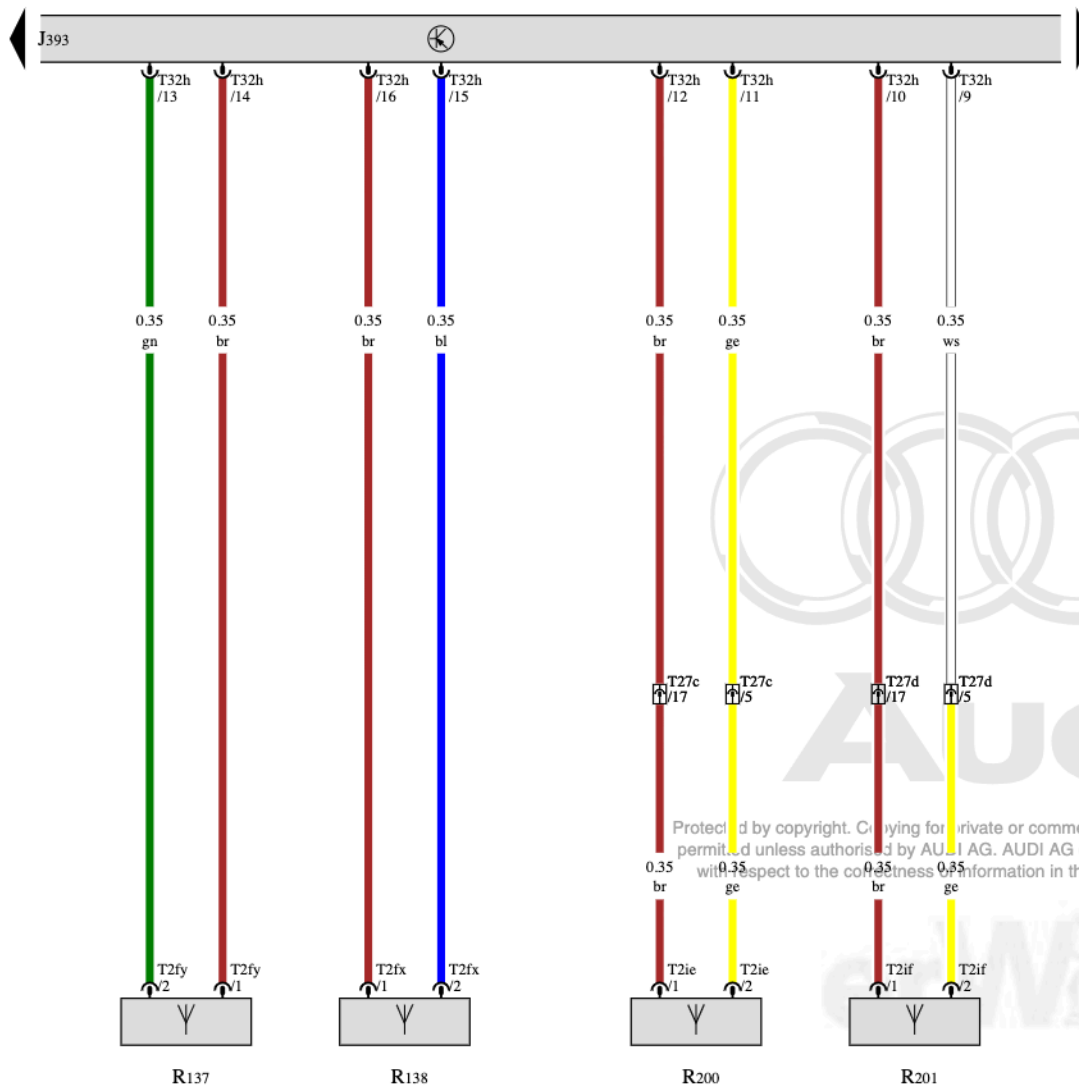


- J393 Comfort System Central Control Module
- R137 Access/Start System Antenna in Luggage Compartment
- R138 Access/Start System Antenna 1 in Vehicle Interior
- R200 Left Access/Start Authorization Antenna
- R201 Right Access/Start Authorization Antenna
- T2fx 2-Pin Connector
- T2fy 2-Pin Connector
- T2ie 2-Pin Connector
- T2if 2-Pin Connector
- T27c 27-Pin Connector, On the Left B-Pillar
- T27d 27-Pin Connector, On the Right B-Pillar
- T32h 32-Pin Connector

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Comfort System Central Control Module, Electronic Steering Column Lock Control Module

- G417 Left Rear Exterior Door Handle Touch Sensor
- G418 Right Rear Exterior Door Handle Touch Sensor
- G605 Left Front Exterior Door Handle Touch Sensor
- G606 Right Front Exterior Door Handle Touch Sensor
- J393 Comfort System Central Control Module
- J587 Selector Lever Sensor System Control Module
- J764 Electronic Steering Column Lock Control Module
- ST2 Fuse Panel 2
- SC5 Fuse 5 (On Fuse Panel C)
- T2hc 2-Pin Connector
- T2ho 2-Pin Connector
- T2hx 2-Pin Connector
- T2hy 2-Pin Connector
- T6p 6-Pin Connector
- T17o 17-Pin Connector, In the Connector Station, Right A-Pillar
- T17r 17-Pin Connector
- T23a 23-Pin Connector, On the Left A-Pillar
- T23b 23-Pin Connector, On the Right A-Pillar
- T27c 27-Pin Connector, On the Left B-Pillar
- T27d 27-Pin Connector, On the Right B-Pillar
- T32g 32-Pin Connector
- T32h 32-Pin Connector
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Depending on Equipment

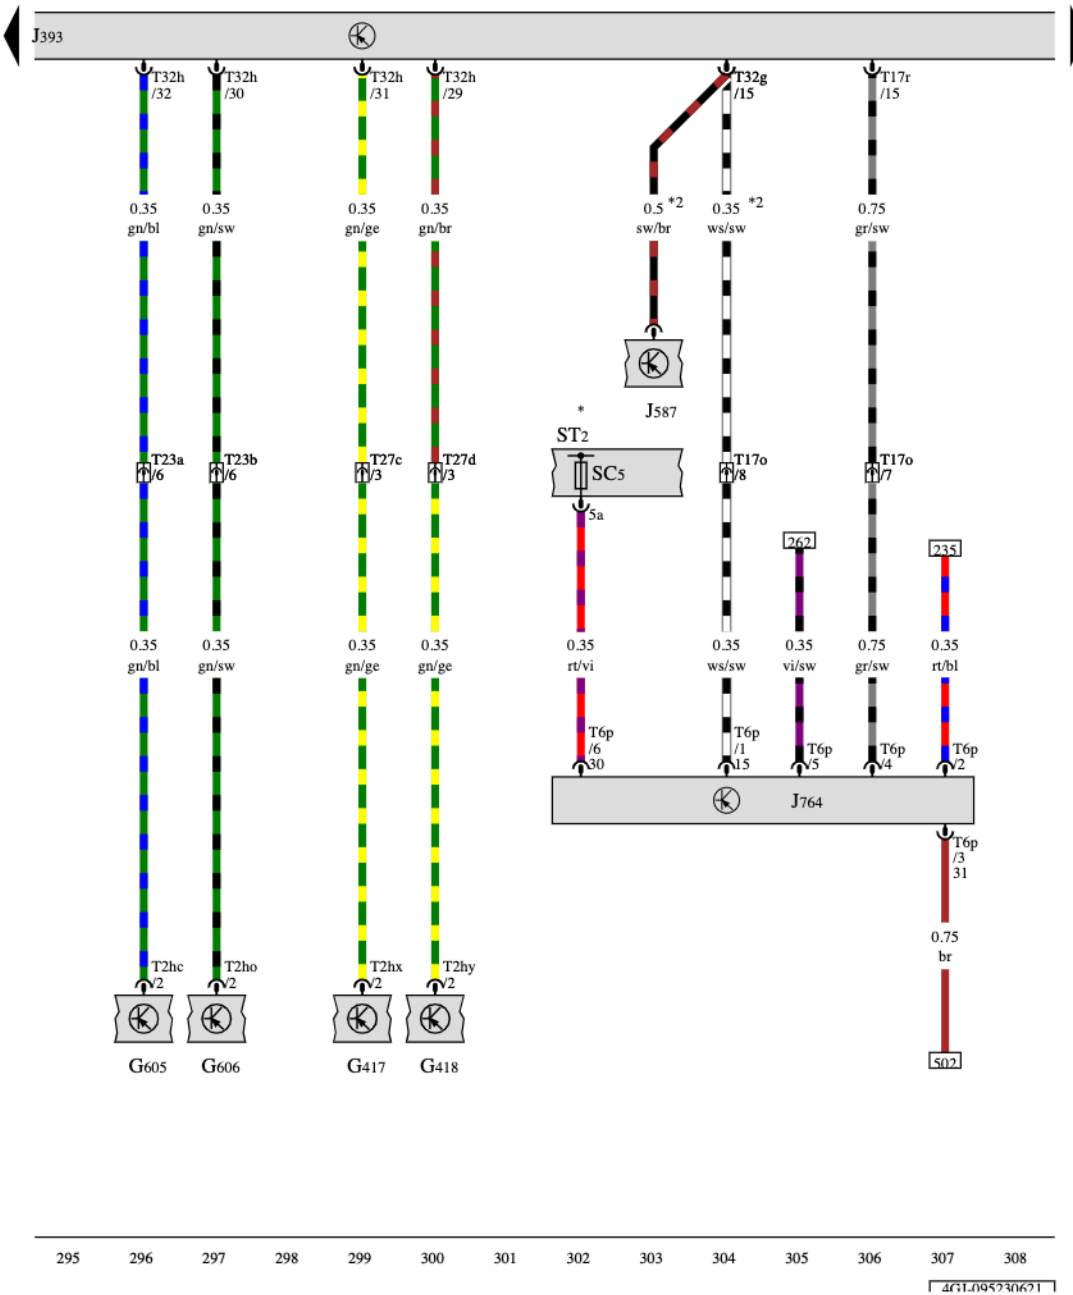

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

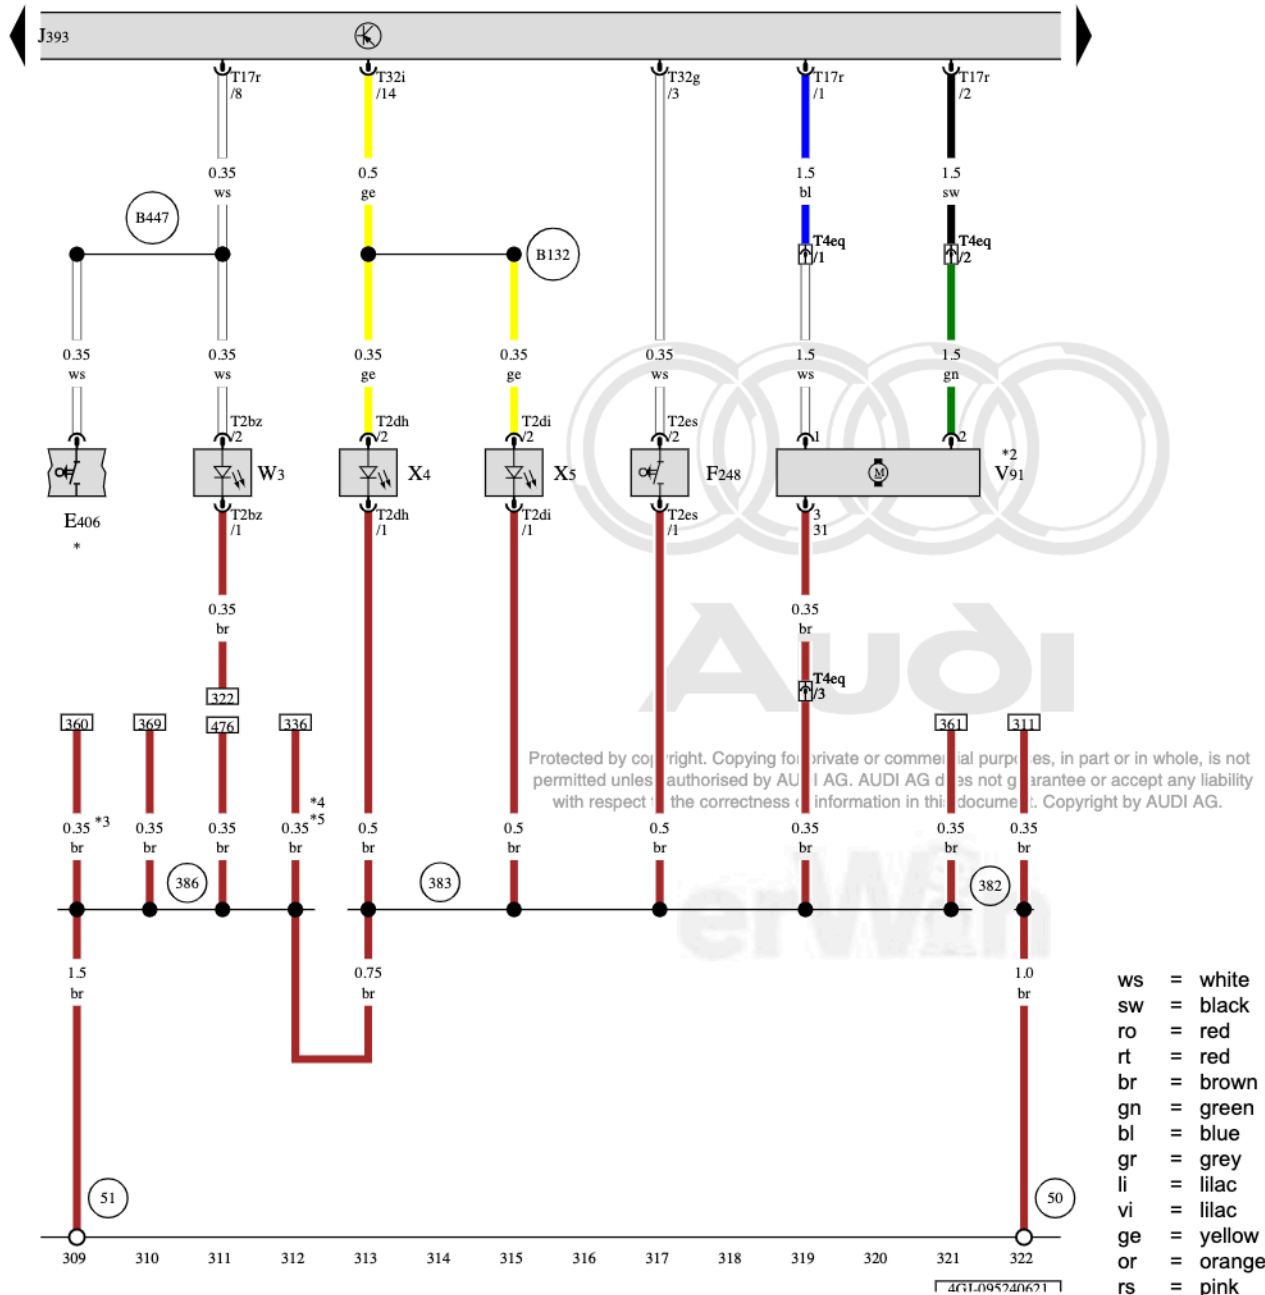

Rear Lid Lock Cylinder Unlock Button, Comfort System Central Control Module, Rear Window Shade Motor, Luggage Compartment Lamp, Left License Plate Lamp

- E406 Rear Lid Lock Button in Luggage Compartment
- F248 Rear Lid Lock Cylinder Unlock Button
- J393 Comfort System Central Control Module
- T2bz 2-Pin Connector
- T2dh 2-Pin Connector
- T2di 2-Pin Connector
- T2es 2-Pin Connector
- T4eq 4-Pin Connector
- T17r 17-Pin Connector
- T32g 32-Pin Connector
- T32i 32-Pin Connector
- V91 Rear Window Shade Motor
- W3 Luggage Compartment Lamp
- X4 Left License Plate Lamp
- X5 Right License Plate Lamp

- 50 Ground Connection in Luggage Compartment, Left
- 51 Ground Connection in Luggage Compartment, Right
- 382 Ground Connection 17 (in Main Wiring Harness)
- 383 Ground Connection 18 (in Main Wiring Harness)
- 386 Ground Connection 21 (in Main Wiring Harness)
- B132 License Plate Lamp Connection (in Interior Wiring Harness)
- B447 Luggage Compartment Lamp Connection (in Main Wiring Harness)
- * Refer to Applicable Convenience System Wiring Diagram
- *2 For Vehicles with Power Rear Window Shade
- *3 Avant
- *4 For Vehicles with Hybrid Drive
- *5 From October 2016

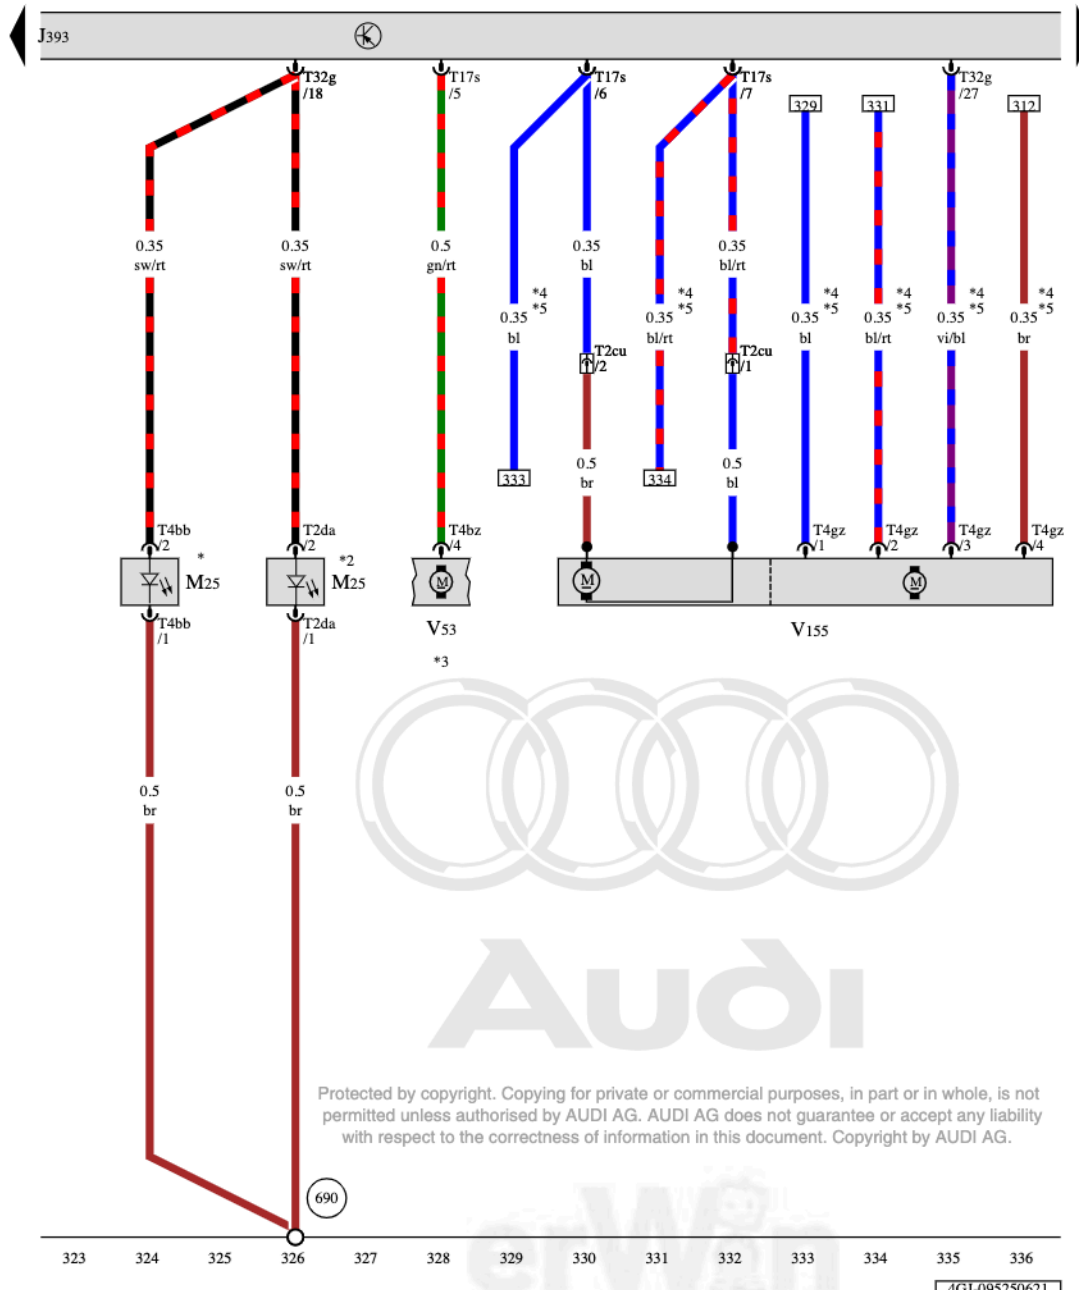

Comfort System Central Control Module, High-Mounted Brake Lamp Bulb, Fuel Filler Door Lock Motor


- J393 Comfort System Central Control Module
- M25 High-Mounted Brake Lamp Bulb
- T2cu 2-Pin Connector
- T2da 2-Pin Connector
- T4bb 4-Pin Connector
- T4bz 4-Pin Connector
- T4gz 4-Pin Connector, Black
- T17s 17-Pin Connector
- T32g 32-Pin Connector
- V53 Rear Lid Central Locking System Motor
- V155 Fuel Filler Door Lock Motor

690 Ground Connection on Roof Frame, Center Rear

- * For Vehicles with Insulating Windshield
- *2 For Vehicles with Heat-Insulating Windshield
- *3 Refer to Applicable Convenience System Wiring Diagram
- *4 For Vehicles with Hybrid Drive
- *5 From October 2016

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Terminal 15 Power Supply Relay, Comfort System Central Control Module, Terminal 15 Power Supply Relay 2

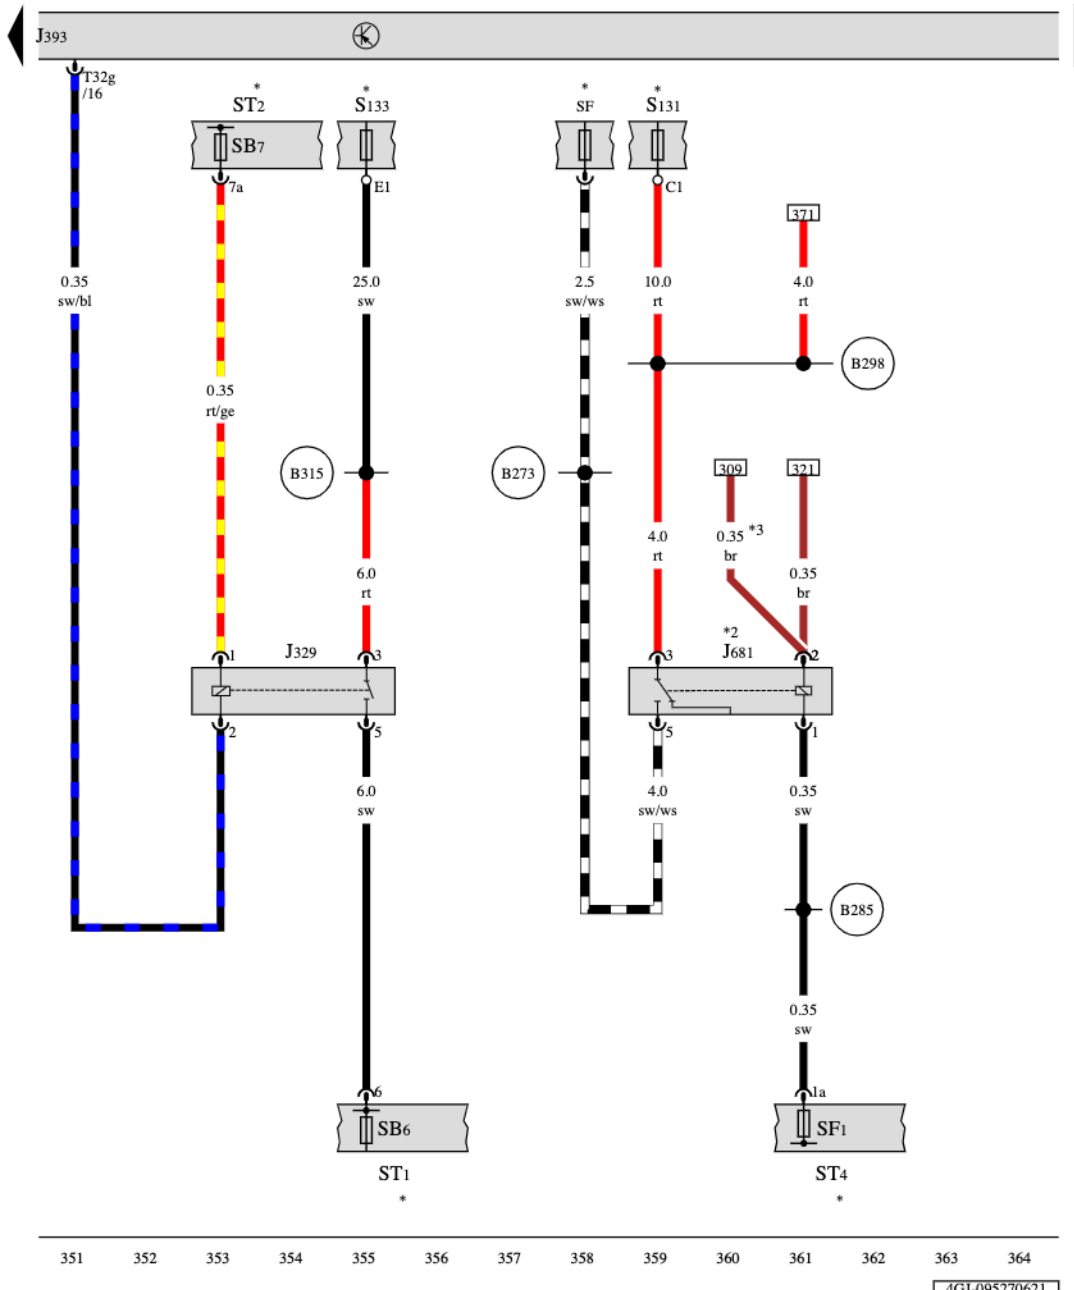


- J329 Terminal 15 Power Supply Relay
- J393 Comfort System Central Control Module
- J681 Terminal 15 Power Supply Relay 2
- SF Fuse Panel F
- SF1 Fuse 1 (On Fuse Panel F)
- ST1 Fuse Panel 1
- ST2 Fuse Panel 2
- ST4 Fuse Panel 4
- SB6 Fuse 6 (On Fuse Panel B)
- SB7 Fuse 7 (On Fuse Panel B)
- S131 Safety Fuse 1
- S133 Safety Fuse 3
- T32g 32-Pin Connector

- B273 Positive Connection (15) (in Main Wiring Harness)
- B285 Positive Connection 9 (15a) (in Main Wiring Harness)
- B298 Positive Connection 2 (30) (in Main Wiring Harness)
- B315 Positive Connection 1 (30a) (in Main Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions Depending on Equipment
- *2 Avant
- *3

Prohibited by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the prior written authorization of AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

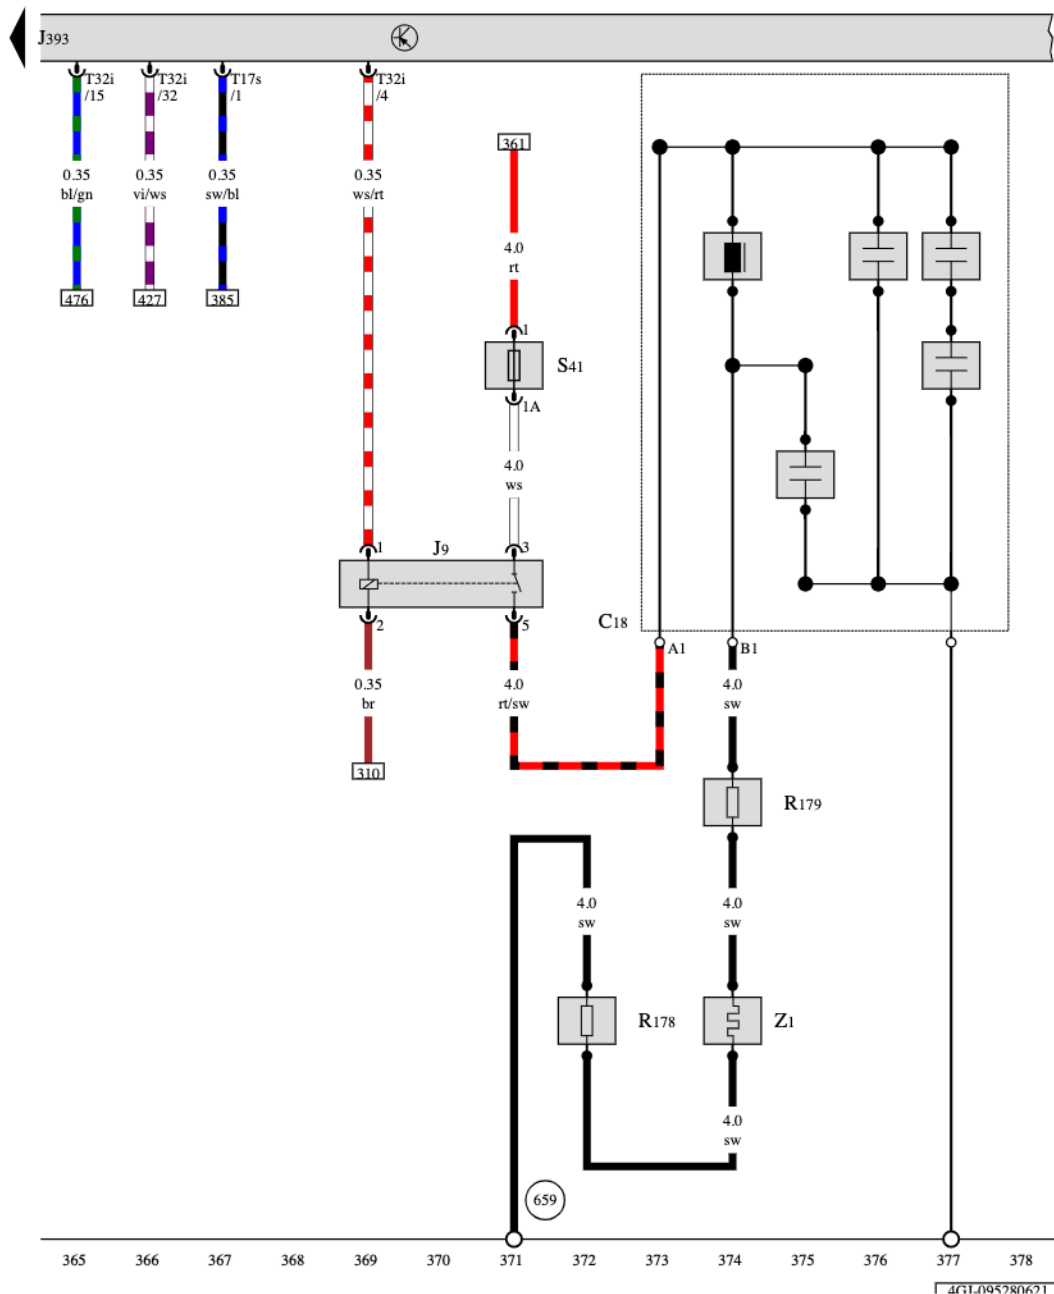

Windshield Antenna Suppression Filter, Rear Window Defogger Relay, Comfort System Central Control Module

- C18 Windshield Antenna Suppression Filter
- J9 Rear Window Defogger Relay
- J393 Comfort System Central Control Module
- R178 Fm Frequency Filter in Negative Wire
- R179 Fm Frequency Filter in Positive Wire
- S41 Rear Window Defogger Fuse
- T17s 17-Pin Connector
- T32i 32-Pin Connector
- Z1 Rear Window Defogger
- 659 Ground Connection 1 near Right Rear Window

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Light Recognition Sensor, Automatic Dimming Interior Rearview Mirror Relay, Automatic Dimming Interior Rearview Mirror

- G399 Light Recognition Sensor
- J910 Automatic Dimming Interior Rearview Mirror Relay
- MX6 Right Tail Lamp 2
- ST1 Fuse Panel 1
- SB2 Fuse 2 (On Fuse Panel B)
- ST3 Fuse Panel 3
- SF3 Fuse 3 (On Fuse Panel F)
- T8a 8-Pin Connector
- Y7 Automatic Dimming Interior Rearview Mirror

- 370 Ground Connection 5 (in Main Wiring Harness)
- B278 Positive Connection 2 (15a) (in Main Wiring Harness)
- B283 Positive Connection 7 (15a) (in Main Wiring Harness)
- B318 Positive Connection 4 (30a) (in Main Wiring Harness)
- B469 Connection 5 (in Main Wiring Harness)

- * For Vehicles with Start/Stop System
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 For Vehicles Without High Beam Assist
- *4 For Vehicles Without Start/Stop System

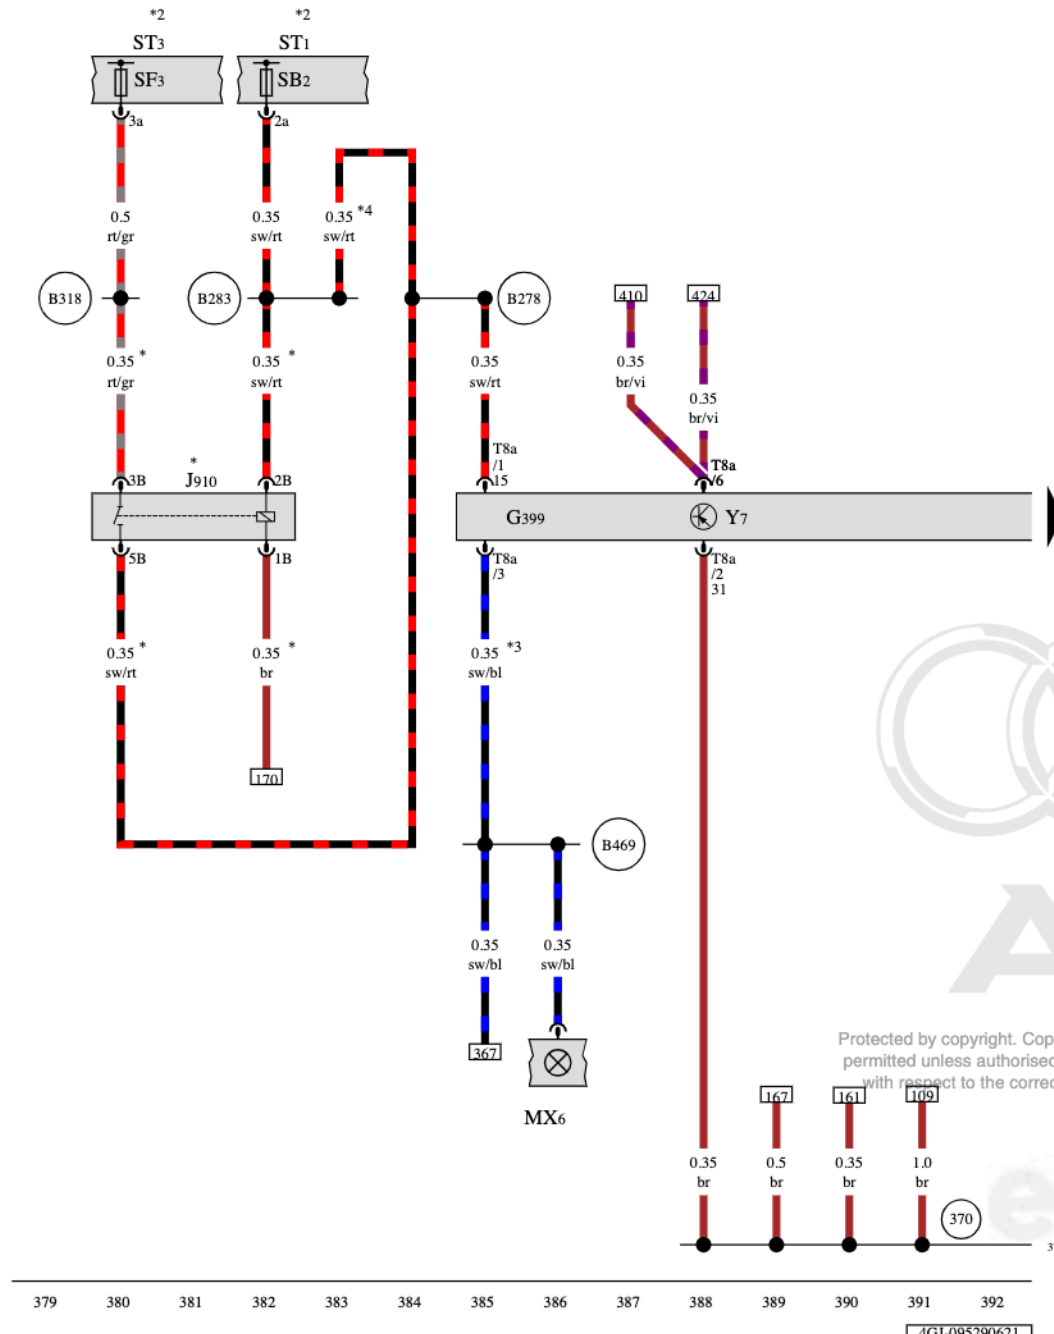

Humidity Sensor, Automatic High Beam Assist Control Module, Front Passenger Vanity Mirror Lamp, Driver Vanity Mirror Lamp, Automatic Dimming Interior Rearview Mirror


- F147 Driver Vanity Mirror Lamp Contact Switch
- F148 Front Passenger Vanity Mirror Lamp Contact Switch
- G355 Humidity Sensor
- J386 Driver Door Control Module
- J387 Front Passenger Door Control Module
- J844 Automatic High Beam Assist Control Module
- T2al 2-Pin Connector
- T2am 2-Pin Connector
- T2ao 2-Pin Connector
- T2ap 2-Pin Connector
- T8a 8-Pin Connector
- W14 Front Passenger Vanity Mirror Lamp
- W20 Driver Vanity Mirror Lamp
- Y7 Automatic Dimming Interior Rearview Mirror


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document.

- 370 Ground Connection 5 (in Main Wiring Harness)
- B427 Mirror Auto-Dimming Signal Connection 1 (in Main Wiring Harness)
- B428 Mirror Auto-Dimming Signal Connection 2 (in Main Wiring Harness)
- B566 Connection 33 (in Main Wiring Harness)

- * Refer to Applicable Convenience System Wiring Diagram
- *2 For Vehicles with High Beam Assist
- *3 For Vehicles with a Humidity Sensor

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

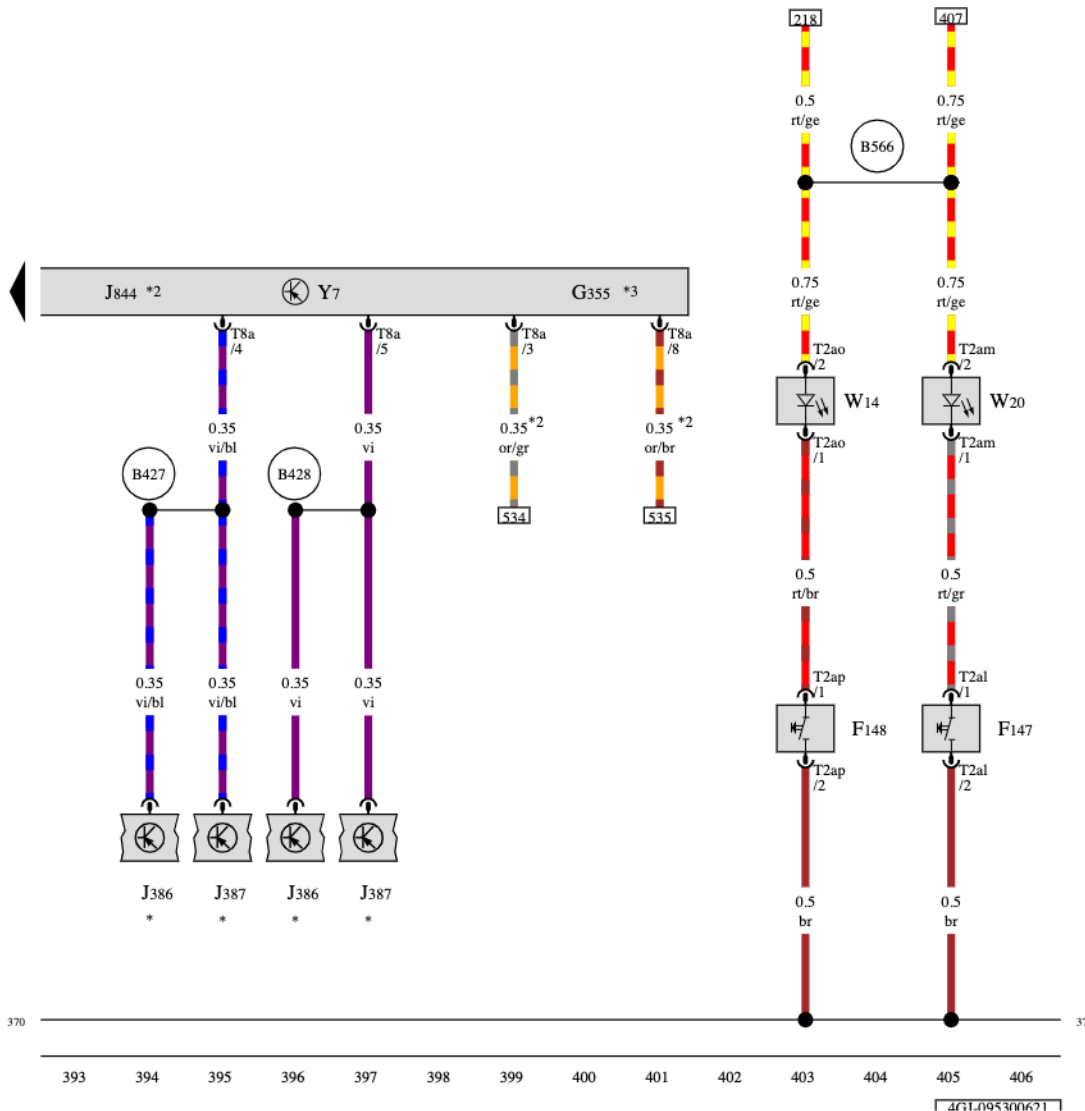

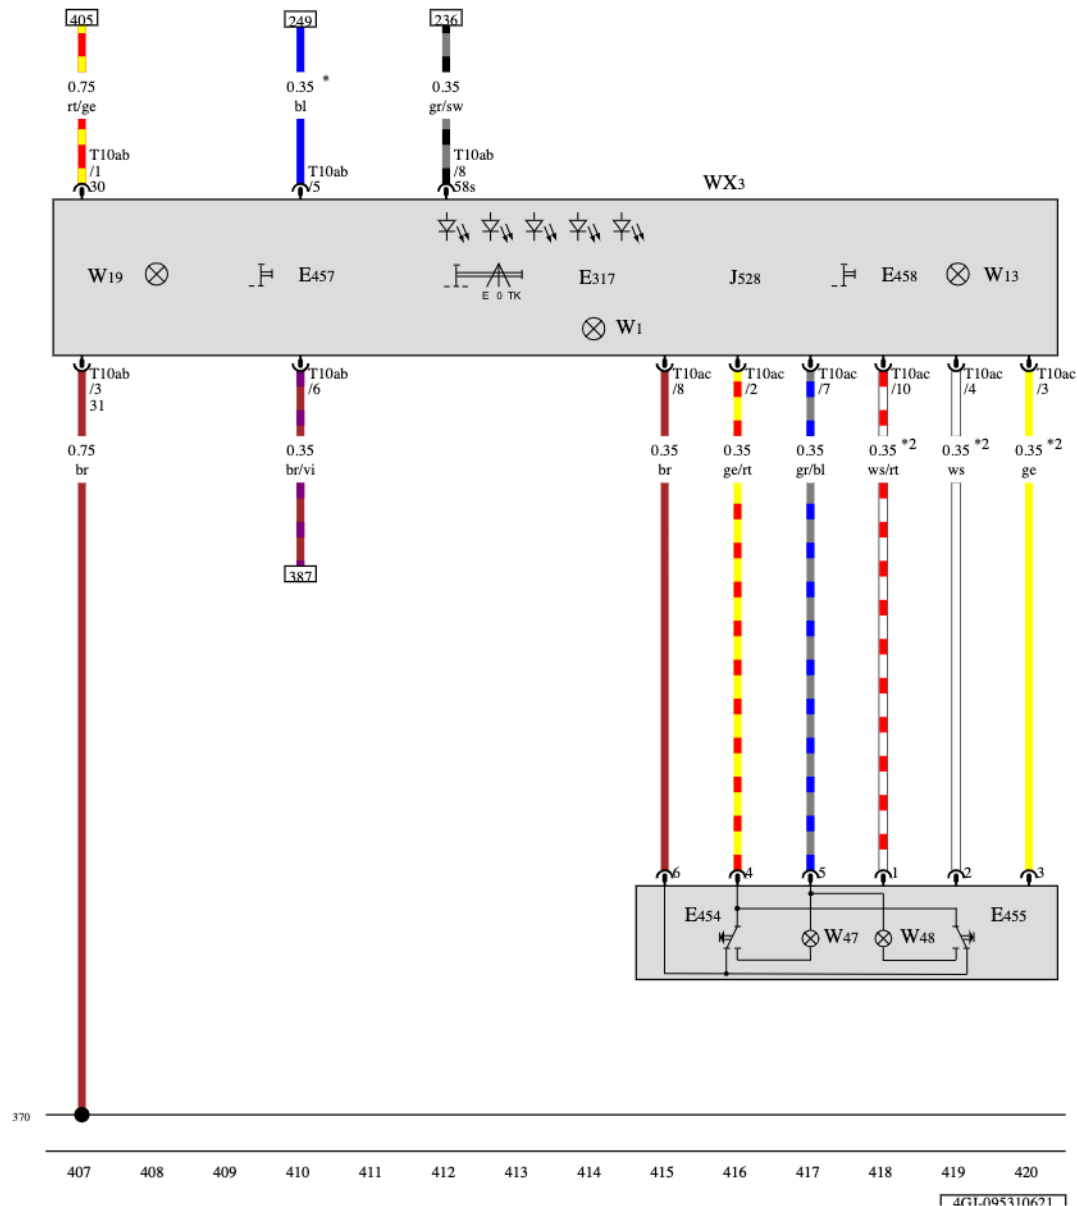

Front Passenger Reading Lamp, Driver Reading Lamp

- E317 Interior Lighting Switch
- E454 Left Rear Reading Lamp Switch
- E455 Right Rear Reading Lamp Switch
- E457 Driver Reading Lamp Button
- E458 Front Passenger Reading Lamp Button
- J528 Roof Electronics Control Module
- T10ab 10-Pin Connector
- T10ac 10-Pin Connector
- W1 Front Interior Lamp
- WX3 Front Roof Module
- W13 Front Passenger Reading Lamp
- W19 Driver Reading Lamp
- W47 Left Rear Interior Lamp
- W48 Right Rear Interior Lamp

370 Ground Connection 5 (in Main Wiring Harness)

- * The Color of the Wires Depends on Vehicle Equipment
- *2 Wire Has No Function

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Front Interior Lamp, Front Roof Module


- E633 Left Front Reading Lamp Button
- E634 Right Front Reading Lamp Button
- E635 Rear Reading Lamp Front Button
- ST2 Fuse Panel 2
- SB8 Fuse 8 (On Fuse Panel B)
- T10ab 10-Pin Connector
- W1 Front Interior Lamp
- WX3 Front Roof Module
- W65 Left Front Reading Lamp
- W66 Right Front Reading Lamp

370 Ground Connection 5 (in Main Wiring Harness)


B699 LIN Bus Connection 4 (in Main Wiring Harness)


* For Vehicles with Highline Equipment

*2 Refer to Applicable Wiring Diagram for Fuse Positions

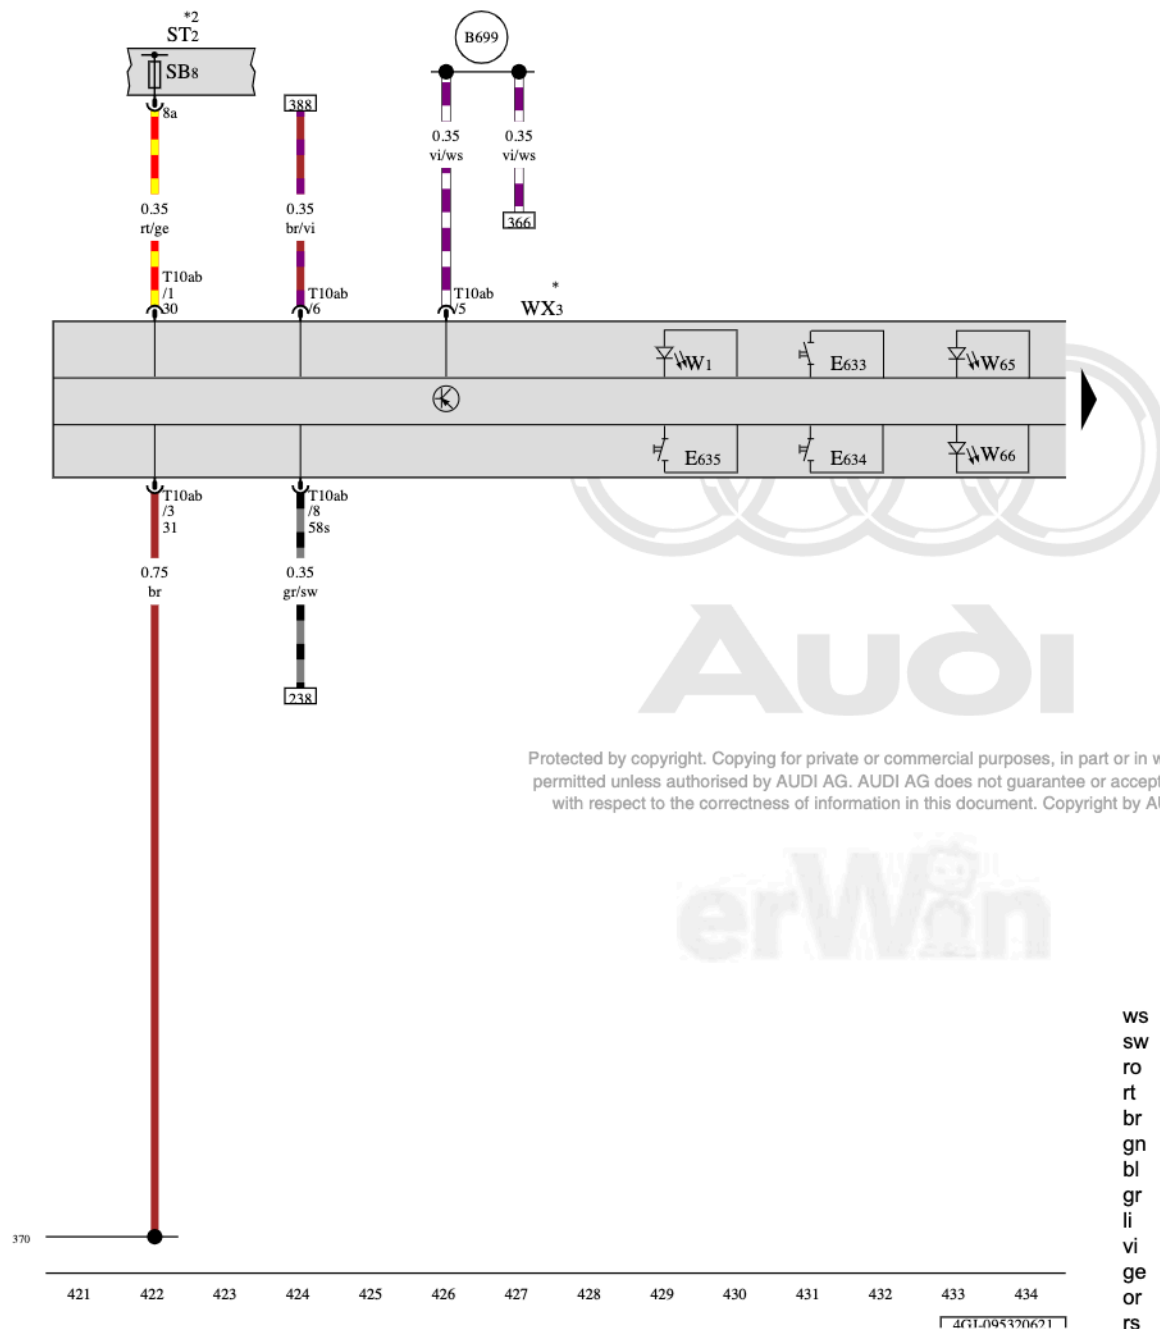


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

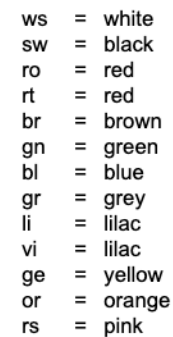

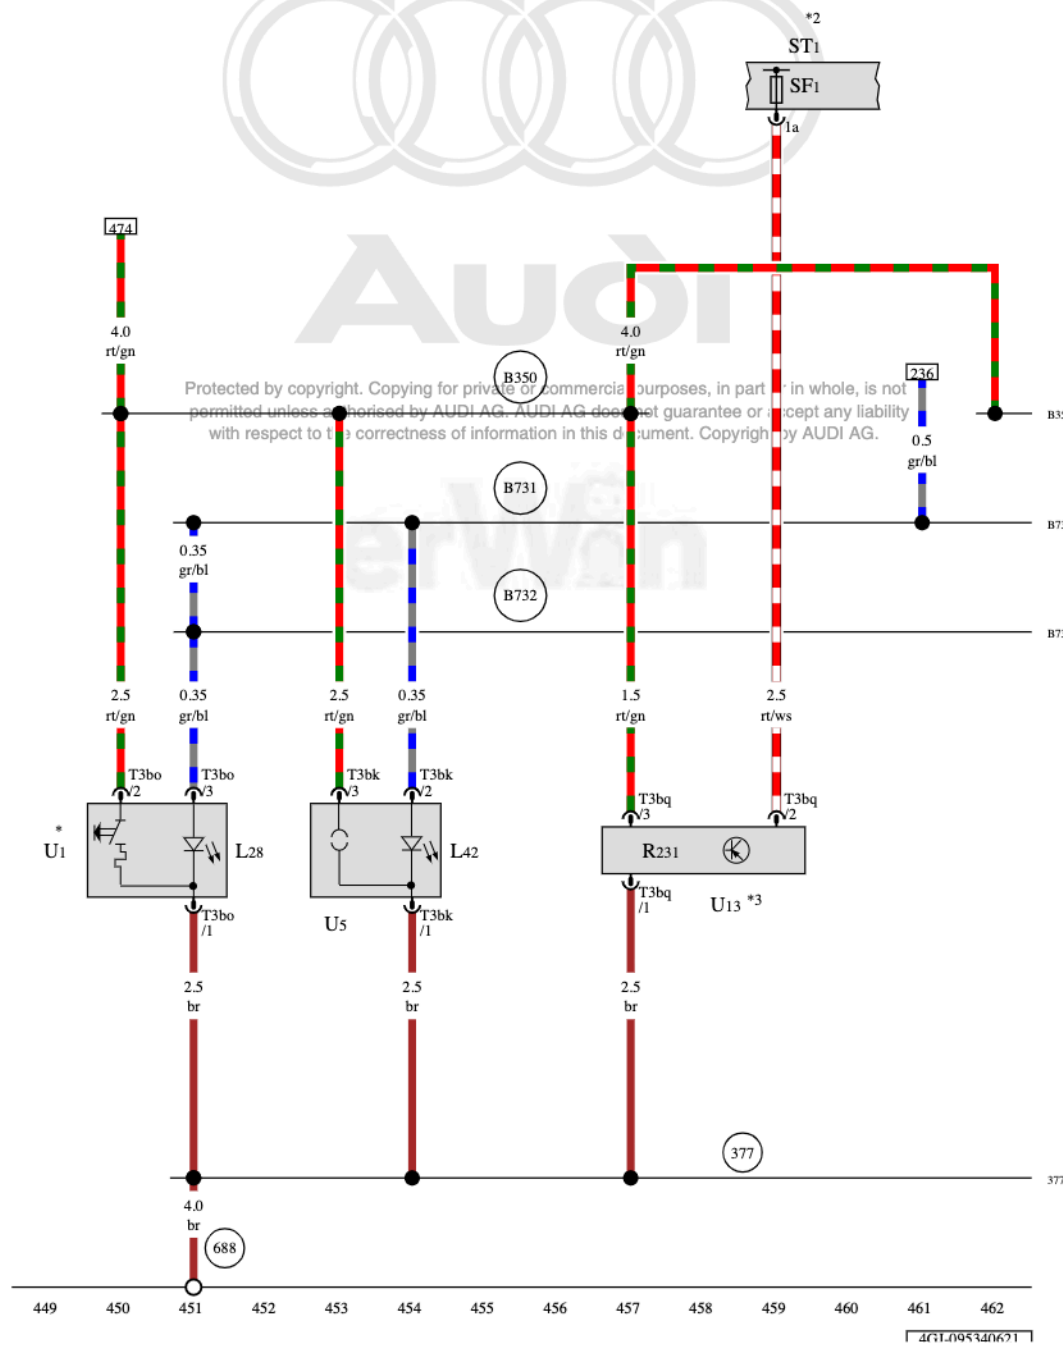

Cigarette Lighter, 12 V Socket, Converter with Socket, 12 V-230 V

- L28 Cigarette Lighter Illumination Bulb
- L42 Socket Illumination Bulb
- R231 External Audio Source Connection 2
- SF1 Fuse 1 (On Fuse Panel F)
- ST1 Fuse Panel 1
- T3bk 3-Pin Connector
- T3bo 3-Pin Connector
- T3bq 3-Pin Connector
- U1 Cigarette Lighter, In the Front Center Console
- U5 12 V Socket, In the Center Console
- U13 Converter with Socket, 12 V-230 V
- 377 Ground Connection 12 (in Main Wiring Harness)
- 688 Ground Connection 2 on Center Tunnel
- B350 Positive Connection 1 (87a) (in Main Wiring Harness)
- B351 Positive Connection 2 (87a) (in Main Wiring Harness)
- B731 Connection 58s (in Main Wiring Harness) 1
- B732 Connection 58s (in Main Wiring Harness) 2
- * For Vehicles with a Smoking Package
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 For Vehicles with China Equipment

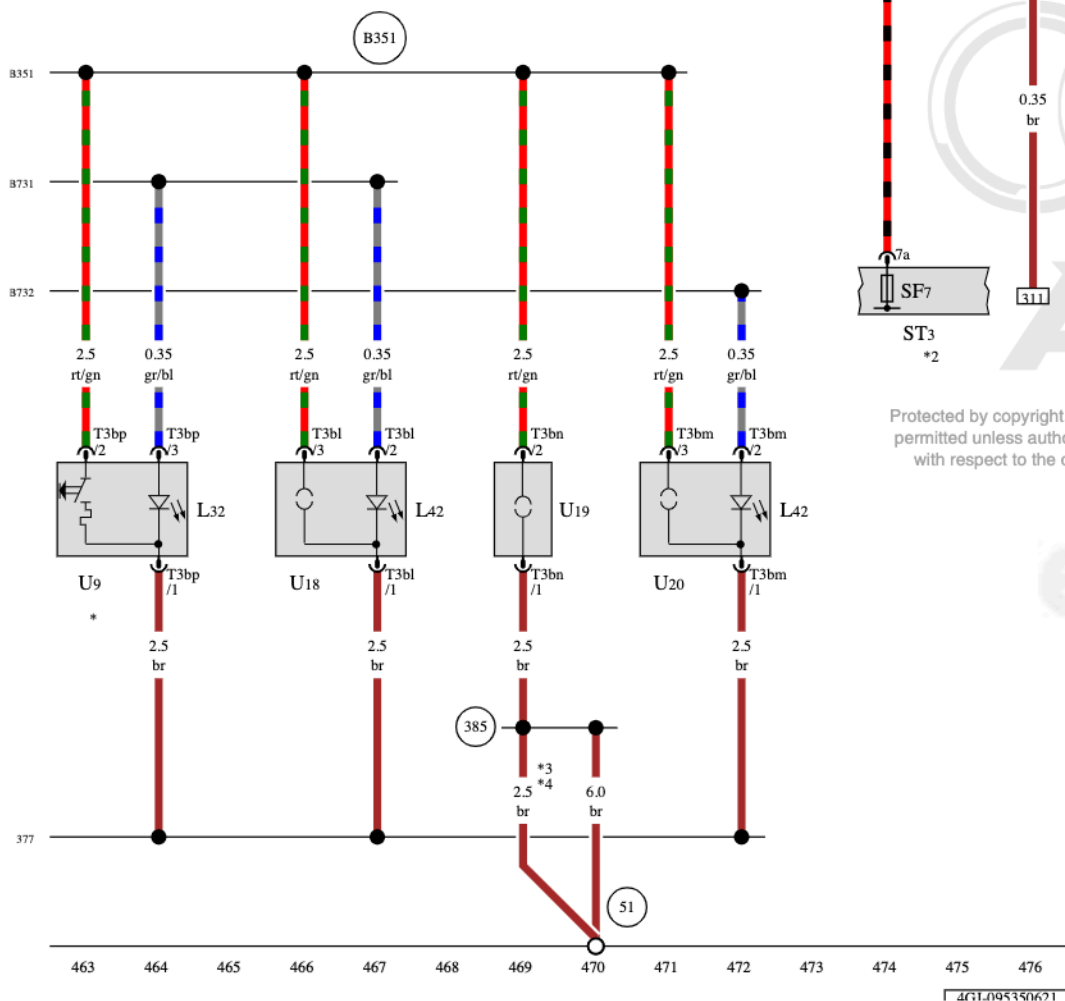

Sockets Relay, Rear Cigarette Lighter, 12 V Socket 2, 12 V Socket 3

- J807 Sockets Relay
- L32 Rear Cigarette Lighter Illumination Bulb
- L42 Socket Illumination Bulb
- ST3 Fuse Panel 3
- SF7 Fuse 7 (On Fuse Panel F)
- T3bl 3-Pin Connector
- T3bm 3-Pin Connector
- T3bn 3-Pin Connector
- T3bp 3-Pin Connector
- U9 Rear Cigarette Lighter, In the Rear Center Console
- U18 12 V Socket 2, In the Rear Center Console
- U19 12 V Socket 3, In the Luggage Compartment
- U20 12 V Socket 4, In the Rear Center Console

- 51 Ground Connection in Luggage Compartment, Right
- 377 Ground Connection 12 (in Main Wiring Harness)
- 385 Ground Connection 20 (in Main Wiring Harness)
- B351 Positive Connection 2 (87a) (in Main Wiring Harness)
- B731 Connection 58s (in Main Wiring Harness) 1

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

B732 Connection 58s (in Main Wiring Harness) 2

- * For Vehicles with a Smoking Package
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 For Vehicles with Hybrid Drive
- *4 From October 2016


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Power Steering Control Module

- G269 Steering Torque Sensor
- J500 Power Steering Control Module
- S132 Safety Fuse 2
- T1d 1-Pin Connector, On the Left Front of the Vehicle Floor
- T2fa 2-Pin Connector
- T6ak 6-Pin Connector
- T6al 6-Pin Connector, In the Engine/Motor Compartment, Left Front, Bottom
- V187 Electromechanical Power Steering Motor

- 671 Ground Connection 1 on Left Front Longitudinal Member

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Data Bus Wire (Flexray Bus)

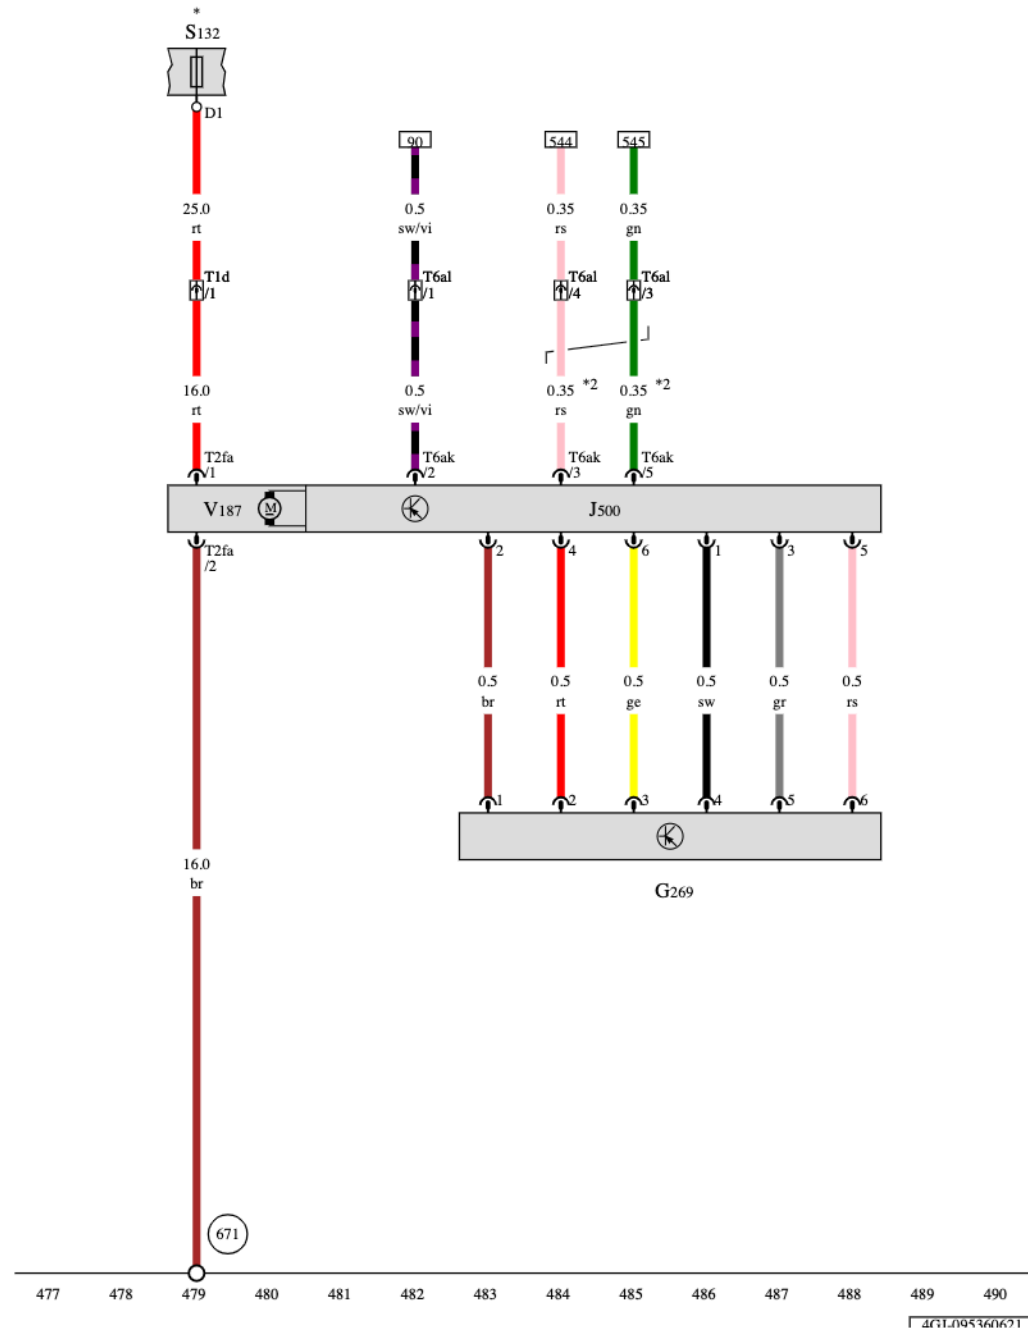


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Instrument Cluster Control Module

- J285 Instrument Cluster Control Module
- K1 High Beam Indicator Lamp
- K47 ABS Indicator Lamp
- K261 Left Turn Signal Indicator Lamp
- ST2 Fuse Panel 2
- SC10 Fuse 10 (On Fuse Panel C)
- T32 32-Pin Connector
- Y24 Display Unit in Instrument Cluster

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- 332 Ground Connection 4 (in Instrument Panel Wiring Harness)
- A164 Positive Connection 2 (30a) (in Instrument Panel Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 For Vehicles with Heated Steering Wheel

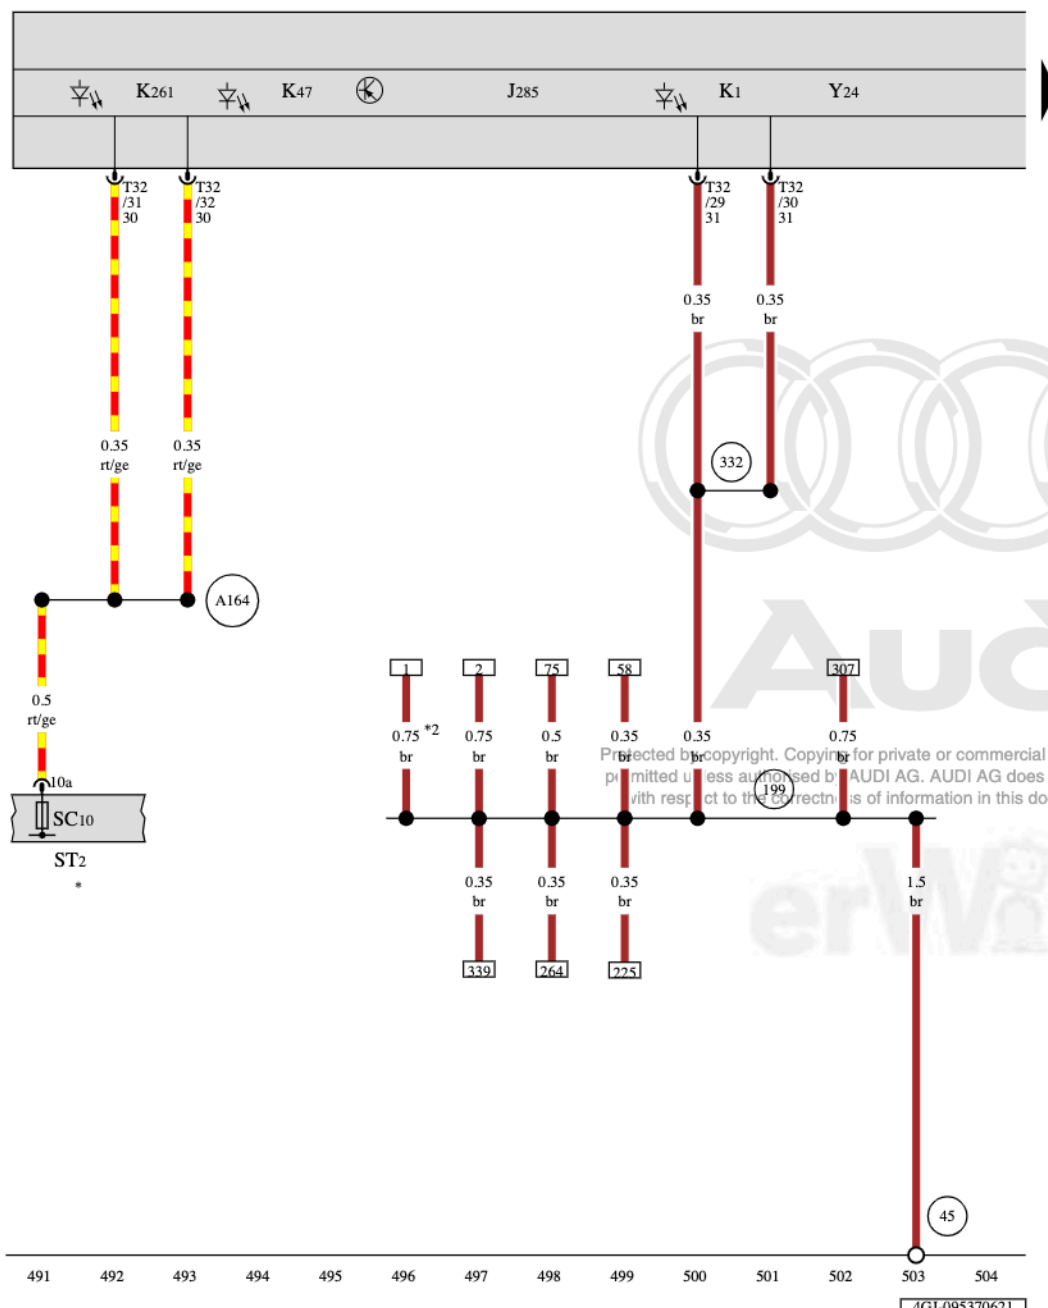

 - ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink




- * Depending on Equipment
- *2 Refer to Applicable Wiring Diagram for Data Bus Networking
- *3 Refer to Applicable MMI (Information Electronics) Wiring Diagram
- *4 Refer to Applicable Wiring Diagram
- *5 Fiber Optic Cable

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Fuel Gauge, Fuel Level Sensor 2, Instrument Cluster Control Module

- G Fuel Level Sensor
- G1 Fuel Gauge
- G169 Fuel Level Sensor 2
- J285 Instrument Cluster Control Module
- K262 Right Emergency Flasher Indicator Lamp
- T6aq 6-Pin Connector
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- T32 32-Pin Connector

411 Sensor Ground Connection 2 (in Main Wiring Harness)

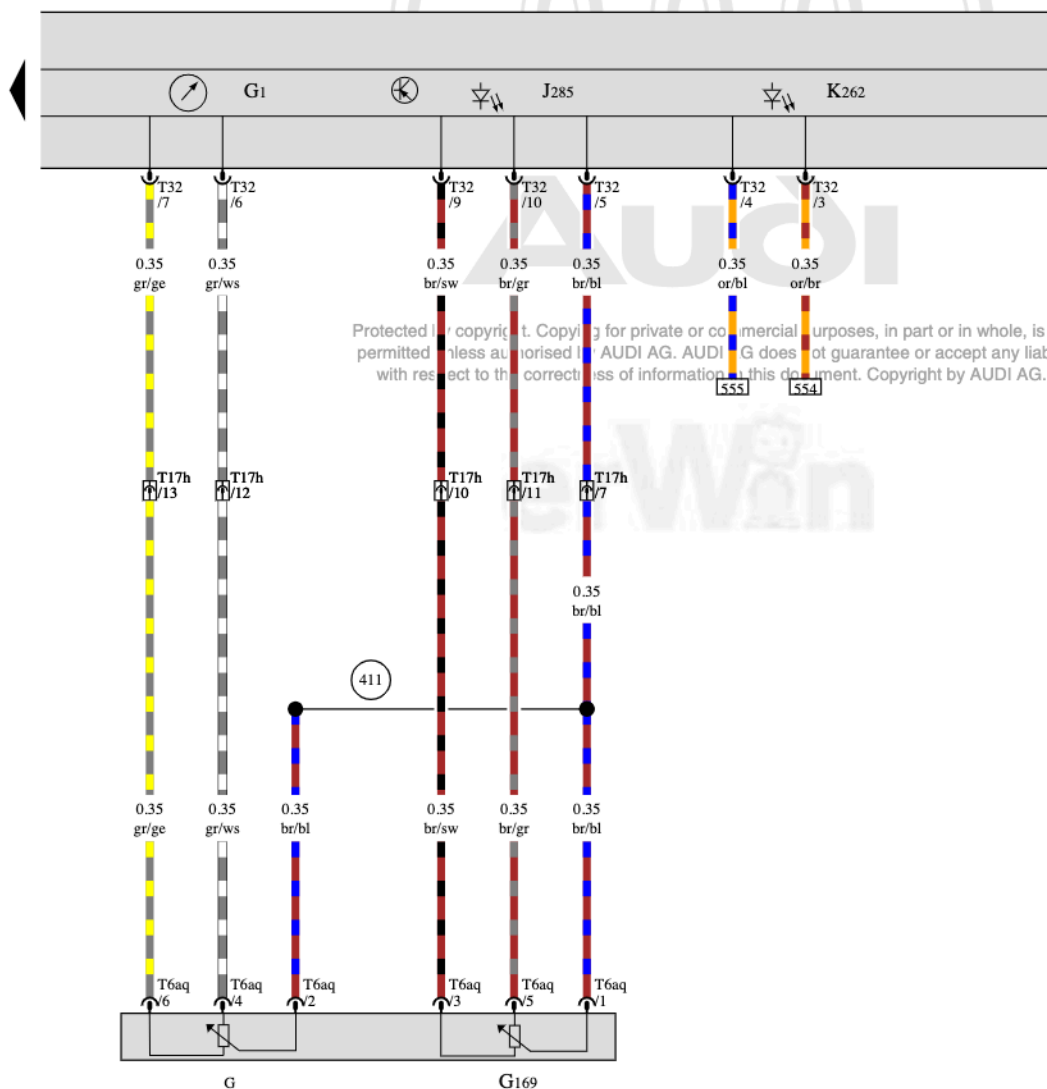

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

519 520 521 522 523 524 525 526 527 528 529 530 531 532


461.095390671

Data Bus on Board Diagnostic Interface

- J217 Transmission Control Module
- J533 Data Bus on Board Diagnostic Interface
- J623 Engine/Motor Control Module
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV33 Powertrain CAN Bus High Wire Junction
- TV37 Powertrain CAN Bus Low Wire Junction
- TV41 Extended CAN Bus High Wire Junction
- TV42 Extended CAN Bus Low Wire Junction
- TV79 Powertrain CAN Bus High Wire Junction 2
- TV82 Powertrain CAN Bus Low Wire Junction 2

- B108 CAN Bus Extended High Connection 1 (in Main Wiring Harness)
- B109 CAN Bus Extended Low Connection 1 (in Main Wiring Harness)
- B383 Powertrain CAN Bus High Connection 1 (in Main Wiring Harness)
- B390 Powertrain CAN Bus Low Connection 1 (in Main Wiring Harness)
- E93 CAN Bus High Connection 1 (in Engine Wiring Harness)
- E94 CAN Bus Low Connection 1 (in Engine Wiring Harness)


- * Refer to Applicable Wiring Diagram for Automatic Transmission
- *2 Refer to Applicable Engine Wiring Diagram
- *3 For Vehicles with High Beam Assist

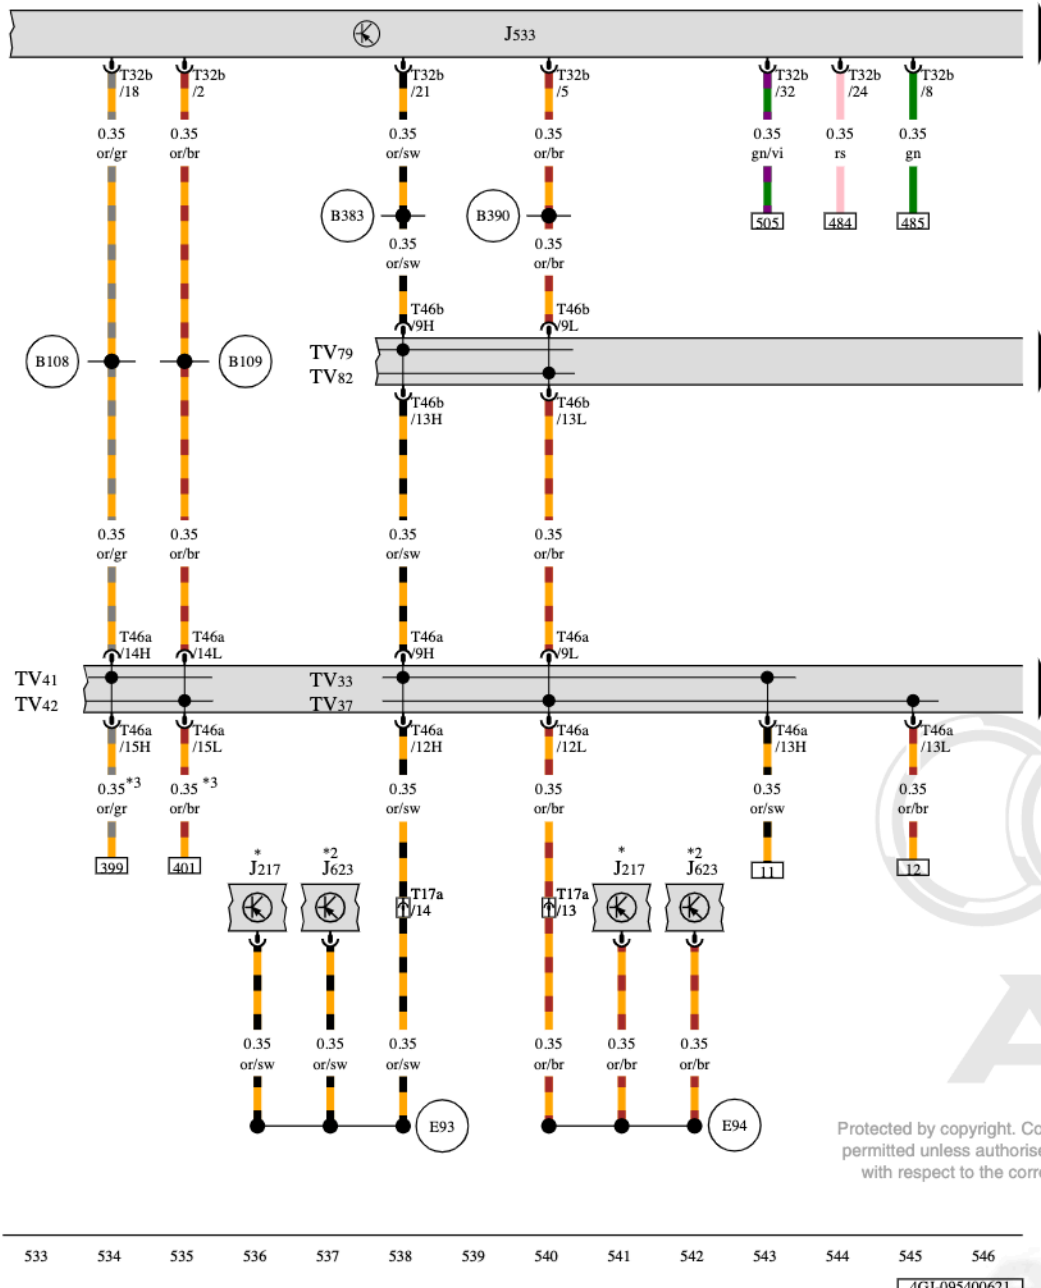

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- ll = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Data Bus on Board Diagnostic Interface, Comfort System
CAN Bus High Wire Junction, Comfort System CAN Bus
High Wire Junction 2

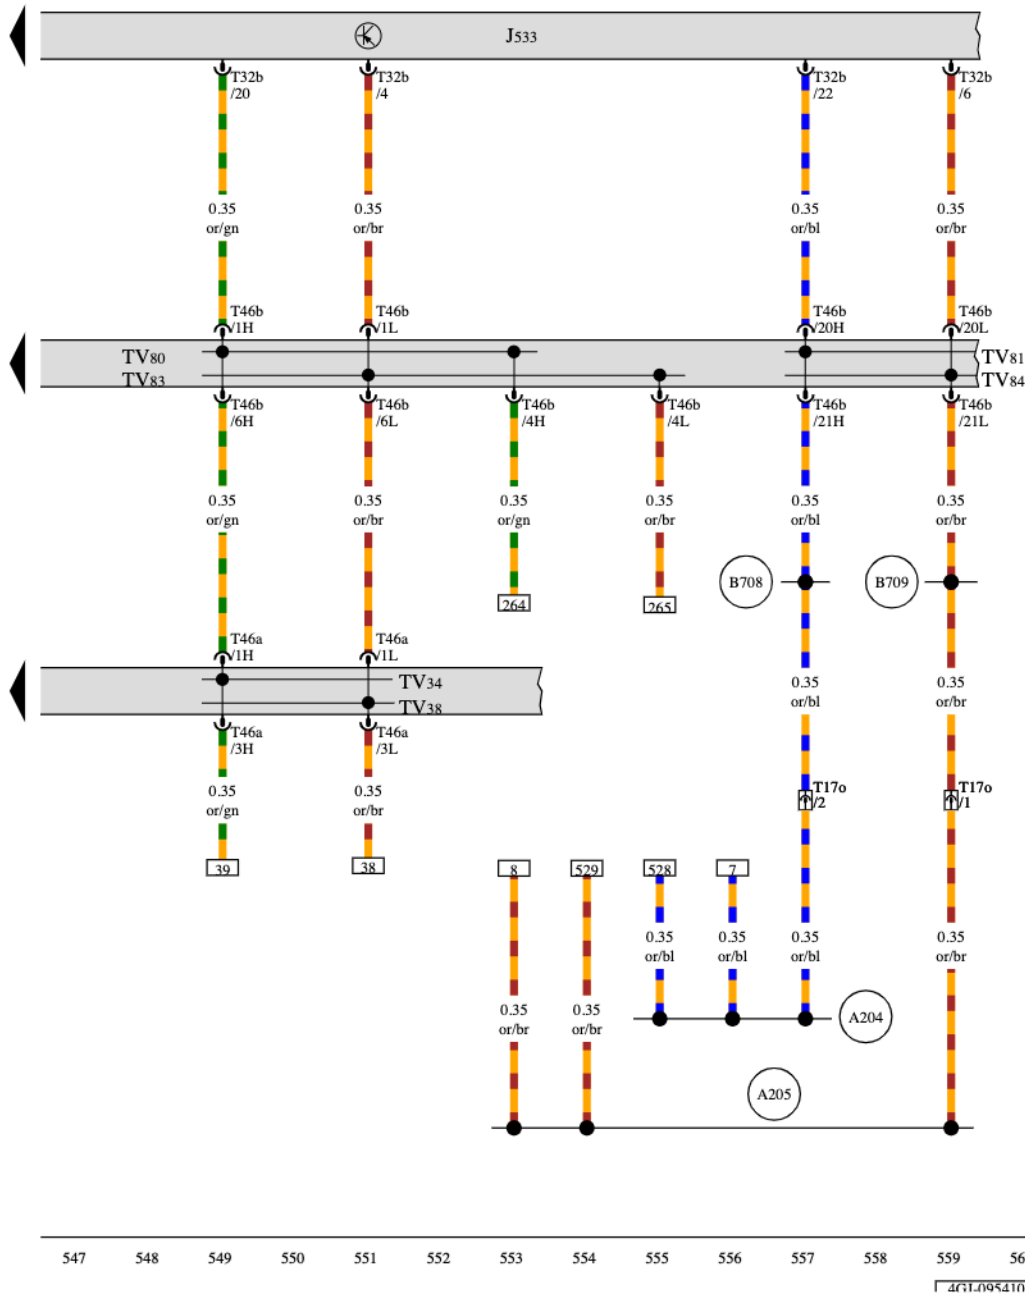

- J533 Data Bus on Board Diagnostic Interface
- T17o 17-Pin Connector, In the Connector Station, Right A-Pillar
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- TV80 Comfort System CAN Bus High Wire Junction 2
- TV81 Instrument Cluster CAN Bus High Wire Junction 2
- TV83 Comfort System CAN Bus Low Wire Junction 2
- TV84 Instrument Cluster CAN Bus Low Wire Junction 2
- A204 Instrument Cluster CAN Bus High Connection (in Instrument Panel Wiring Harness)
- A205 Instrument Cluster CAN Bus Low Connection (in Instrument Panel Wiring Harness)
- B708 Instrument Cluster CAN Bus High Connection 1 (in Main Wiring Harness)
- B709 Instrument Cluster CAN Bus Low Connection 1 (in Main Wiring Harness)

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink